Manualslib.com - The Global Manuals Library

PANASONIC CT 25G7 OPERATING INSTRUCTIONS MANUAL

Available languages

EN ES

Quick Links

Specifications
Optional Cable Connections
Cable / Antenna Connection
Feature Comparison Chart

Table of Contents

ENVIRONMENTAL NOTICE
FCC CAUTION
Table of Contents
Customer Record
Care and Cleaning
Specifications
Television Location
Optional Cable Connections
AC Power Supply Cord
Cable / Antenna Connection
VCR Connection
VCR
Amplifier (TO AUDIO AMP)
Battery Installation
Mode Operational Key Chart
Programming the Remote
Programming Without a Code
CONTROL OPERATION
Component Codes
codes for cable box
codes for dvd
Icon Menus
Set Up
Picture
Timer
ai sound
Audio
Channels
Lock
BLOCKING MESSAGE
ENU OPERATION
rating systems for canada
WARRANTY
Registro del Usuario

Cuidado y limpieza
Especificaciones
Ubicación de la Televisión
Conexiones de Cable Opcional
Cable de Suministro de Corriente Alterna
Conexión de Cable / Antena
PROGRAMA AUTO
Videocasetera
Conexión del Amplificador (TO AUDIO AMP)
Instalación de Pilas en el Control Remoto
Instalación de Pilas en el Control Remoto
Tabla del Modo Operacional de las Teclas
Programando el Control Remoto
Programando Sin Código
Programación Sin Código
Códigos de Componentes
Códigos para DVD
Códigos para DBS
Menús de iconos
Ajuste
Imagen
PERACIÓN DEL
Cronómetro
Audio
Canales
Bloqueo
Other ManualsLib Projects

Panasonic®

Color Television
Operating Instructions

CT-2017	**CT-G2132**	**CT-G2972**
CT-25G7	**CT-G2132L**	**CT-G2972L**
CT-25G7U	**CT-G2172**	**CT-G3352**
	CT-G2172L	**CT-G3352X**

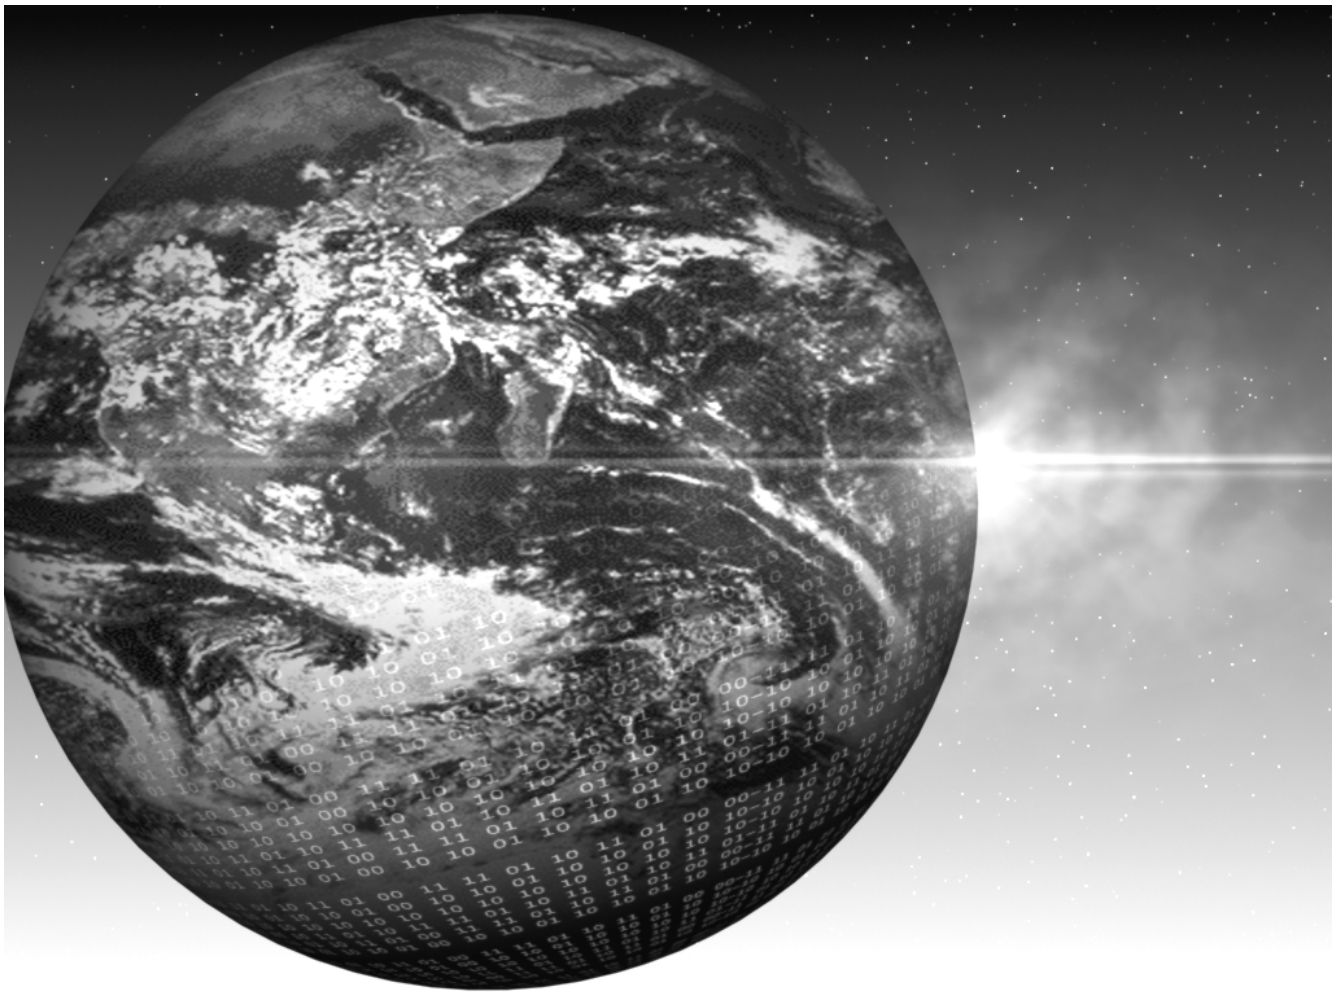

For assistance, please call: 1-800-211-PANA (7262) or
send e-mail to: consumerproducts@panasonic.com (USA only)

TQB2AA0370-2 20325
PRINTED IN USA

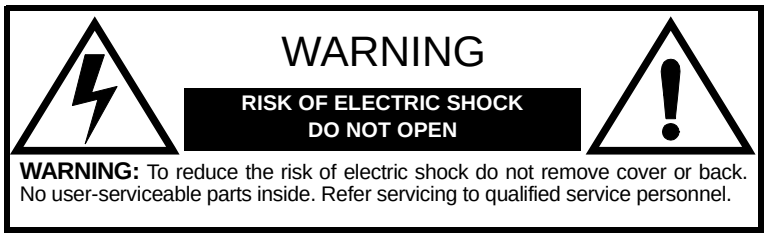
WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING: To reduce the risk of electric shock do not remove cover or back.
No user-serviceable parts inside. Refer servicing to qualified service personnel.

The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product are a risk of electric shock to persons.

The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

The double insulation symbol (a square within a square) is intended to alert qualified service personnel to use only identical replacement parts in this apparatus.

FCC CAUTION: ANY CHANGES OR MODIFICATIONS TO THIS TV RECEIVER NOT EXPRESSLY APPROVED BY MATSUSHITA ELECTRIC CORPORATION OF AMERICA COULD CAUSE HARMFUL INTERFERENCE, WHICH WOULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

ENVIRONMENTAL NOTICE: THIS PRODUCT UTILIZES BOTH A CATHODE RAY TUBE (CRT) AND OTHER COMPONENTS THAT CONTAIN LEAD. DISPOSAL OF THESE MATERIALS MAY BE REGULATED IN YOUR COMMUNITY DUE TO ENVIRONMENTAL CONSIDERATIONS. FOR DISPOSAL OR RECYCLING INFORMATION PLEASE CONTACT YOUR LOCAL AUTHORITIES, OR THE ELECTRONICS INDUSTRIES ALLIANCE: <HTTP://WWW.EIAE.ORG.>

Table of Contents

Congratulations 2
Customer Record 2
Care and Cleaning 2
Specifications 2
Installation 3
Television Location 3
Optional Cable Connections 3
AC Power Supply Cord 3
Cable / Antenna Connection 3
Feature Comparison Chart 4
Auto Set Up Menu 5
Optional Equipment Connections 6
VCR 6
Amplifier (TO AUDIO AMP) 6
Front Control Panel 7
Remote Control Operation 8
Battery Installation 9
Remote Control Operation (CT-G2972 CT-G2972L, CT-G3352 and CT-G3352X only) 9
Battery Installation 9
Mode Operational Key Chart 10
Programming the Remote 12
Programming Without a Code 12
Component Codes 13
Icon Menu Navigation 15
Main Menu Icons 16
Icon Menus 16
Icon Menus Operation 17
Set Up 17
Picture 18
Timer 19
Audio 20
Channels 21
Lock 21
V-Chip Menu Operation 22
FM Radio Operation (model CT-25G7 only) 27
Troubleshooting Chart 28
Limited Warranty 29
Customer Services Directory 31
Index 33

Read these instructions completely before operating television.
Contents are subject to change without notice or obligation.

Copyright 2002 by Matsushita Electric Corporation of America. All rights reserved.
Unauthorized copying and distribution is a violation of law.

Congratulations

Your new TV Monitor/Receiver features a solid state chassis that is designed to give you many years of enjoyment. It was thoroughly tested and tuned at the factory for best performance.

Customer Record

The model and serial number of this product are located on the back of the television. You should note the model and serial number in the space provided and retain as a permanent record of your purchase. This will aid in identification in the event of theft or loss. Product registration for U.S. customers is available at **www.prodreg.com/panasonic**.

Model Number

Serial Number

Care and Cleaning

Screen (Turn TV Off)

- Use a mild soap solution or window cleaner with a soft clean cloth. DO NOT USE ABRASIVE CLEANERS.
- Avoid excessive moisture and wipe dry.

Note: *Do not spray any type of cleaning fluid directly on the screen.*

Cabinet and Remote Control

- ❒ For cabinets and remote control, use a soft cloth dampened with water or a mild detergent solution. Avoid excessive moisture and wipe dry.
- ❒ Do not use benzene, thinner or other petroleum based products.

Specifications

Power Source **CT-2017 (1.4A)** **CT-25G7 (1.8A)** **CT-25G7U (1.8A)**	120V AC, 60Hz
Channel Capability - 181	VHF-12; UHF-56; Cable-113
Video Input Jack	1Vp-p, 75 Ohm, Phono Jack Type
Audio Input Jacks	500mV RMS 47K Ohm

Specifications are subject to change without notice or obligation.

Installation

Television Location

Follow these recommendations before deciding the location of your television.

- ❒ Avoid excessive sunlight or bright lights, including reflections.
- ❒ Keep away from excessive heat or moisture. Inadequate ventilation may cause internal component failure.
- ❒ Fluorescent lighting may reduce remote control transmitting range.
- ❒ Keep away from magnetic equipment, including motors, fans and external speakers.

CAUTION: Use this television receiver only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. In order to avoid injury to children, never place your television receiver on a piece of furniture that is capable of being tilted by a child leaning on it, pulling on it, standing on it, or climbing on it.

Optional Cable Connections

Shielded audio and video cables should be used between components. For best results:

- ❒ Use 75-ohm coaxial shielded cables.
- ❒ Use appropriate input and output connectors that match your component connectors.
- ❒ Avoid long cables to minimize interference.

AC Power Supply Cord

CAUTION: TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF AC OUTLET AND FULLY INSERT. DO NOT USE A PLUG WITH A RECEPTACLE OR OTHER OUTLET UNLESS THE BLADE CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Polarized plug

PROTECT POWER CORDS FROM BEING WALKED ON, ROLLED OVER, CRIMPED, BENT OR PINCHED, PARTICULARLY AT PLUGS, CONVENIENCE RECEPTACLES, AND THE POINT WHERE THEY EXIT FROM THE APPARATUS.

Cable / Antenna Connection

For proper reception, either a cable or antenna connection is required.

Cable Connection

Connect the cable supplied by your local cable company.

Incoming Cable from Cable Company



75 Ohm VHF/UHF on back of TV

Note: *A cable converter box may be required for proper reception. Check with your local cable company for compatibility requirements.*

Antenna Connection

- For proper reception of VHF/UHF channels, an external antenna is required. For best reception, an outdoor antenna is recommended.

Incoming Cable from Home Antenna

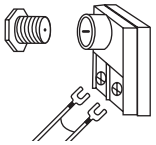

Note: *Cable Mode is preset at the factory. Antenna users must change to TV mode in the Set Up Menu under Prog Chan.*

VHF/UHF Antenna

A VHF/UHF antenna and transformer are supplied in some models. Attach to the TV, adjust the antenna until the picture is clear.

Note: *Refer to Feature Comparison Chart on next page for models with antenna included.*

Feature Comparison Chart

	MODELS	CT-2017	CT-25G7
	Features		
SPECIAL FEATURES	MENU LANGUAGE ENG/SPAN/FR	❒	❒
	CLOSED CAPTIONING	❒	❒
	V-CHIP CAPABILITY	❒	❒
	75 OHM INPUT	❒	❒
	VIDEO NORM	❒	❒
AUDIO	FM RADIO		❒
	STEREO	❒	❒
	AI SOUND	❒	❒
	NUMBER OF SPEAKERS	2	2
A/V JACKS	A/V IN (REAR/FRONT)	1 (1/1)	1 (1/1)
	HEADPHONE JACK	❒	❒

IMPORTANT INFORMATION REGARDING THE USE OF VIDEO GAMES, COMPUTERS, OR OTHER FIXED IMAGE DISPLAYS.

WARNING: The marking or retained image on the picture tube resulting from viewing fixed image is not an operating defect and as such is not covered by Warranty.

This television is designed to display constantly moving images on the screen. Continuous viewing of stationary images such as letterbox pictures on standard screen TVs (with top/bottom bars), non-expanded standard (4:3) pictures on wide screen TVs (with side bars shown on each side of an image), stock market report bars (ticker running at the bottom of the screen), video game patterns, fixed scoreboards, bright station logos, on-line (internet) or repetitive computer style patterns should be limited.

The extended use of fixed image program material can cause a permanent picture tube damage, shown as a “shadow image” viewable on normal programs. This type of irreversible picture tube deterioration can be limited by performing the following steps:

- Do not display the fixed image for extended periods of time.
- Turn the power off when not in use.

Auto Set Up Menu

For your convenience, Auto Set up menu will be displayed on screen when the set is turned on for the first time. If needed, follow the menus and procedures for setting up the features.

- IDIOMA/LANGUE - To change menu language to ENGLISH, SPANISH or FRENCH.

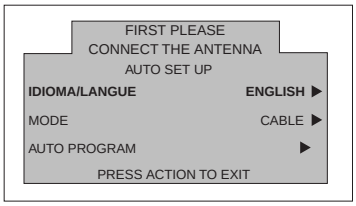

Press **VOL** ▶ to select English, Spanish or French.

- MODE - To select TV (antenna) or CABLE mode depending on the signal source.

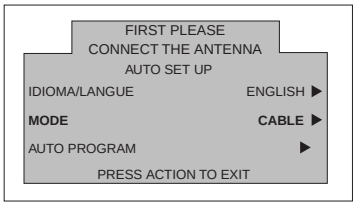

Press **VOL** ▶ to select TV or CABLE.

- AUTO PROGRAM - To automatically program all channels with a signal.

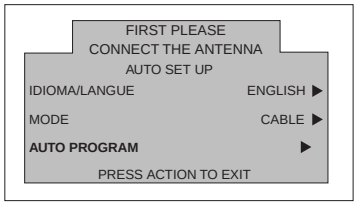

Press **VOL** ▶ to start Auto Programming.

Optional Equipment Connections

VCR Connection

Connect equipment as shown to front or rear Audio/Video input jacks.

Note: *Front and rear Audio/Video connections cannot be operated at the same time.*

1. Select the Video mode by pressing **TV/VIDEO** button.
2. Operate optional equipment as instructed in equipment manual.

Note: *VCRs, video disc players, video game equipment, and DSS equipment can also be connected to the antenna input connection. (See your equipment manual).*

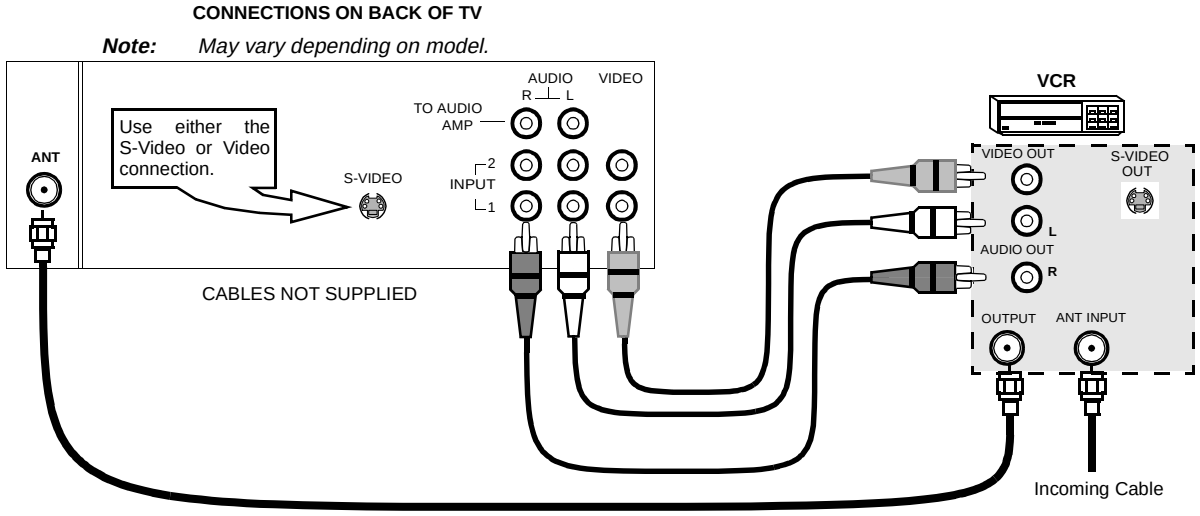

Amplifier Connection (TO AUDIO AMP)

To listen through a separate stereo system, connect an external audio amplifier TO AUDIO AMP inputs on back of television.

Note: *TO AUDIO AMP terminals cannot be connected directly to external speakers.*

Audio Adjustments

1. Select SPEAKERS ON located in the onscreen AUDIO menu.
2. Set amplifier volume to minimum.
3. Adjust television volume to desired level.
4. Adjust amplifier volume to match the television.
5. Select SPEAKERS OFF & VARIABLE AUDIO OUT from AUDIO menu.
6. Volume, mute, bass, treble and balance are now controlled through the television.

Note: *Select SPEAKERS OFF & FIXED AUDIO OUT to control audio functions through the external amplifier.*

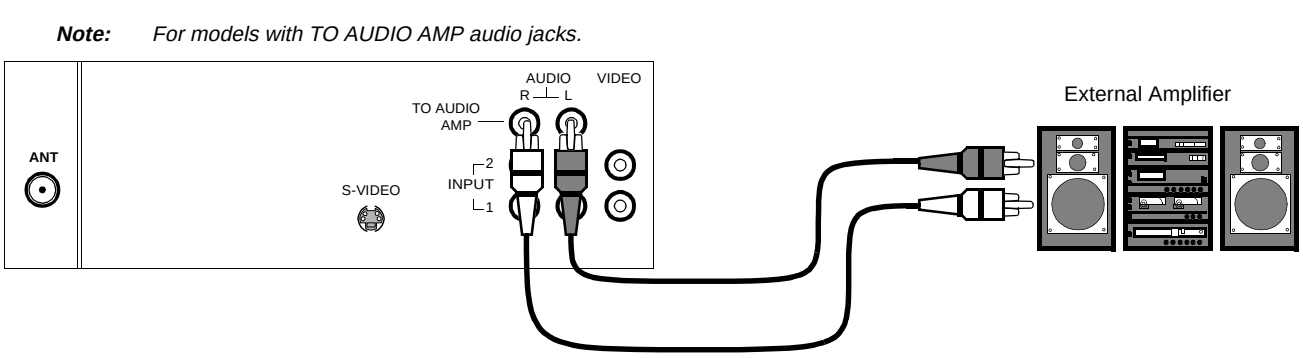

Front Control Panel

TV/VIDEO

Press ◯ to select VIDEO input mode.

Note: *The front control panel can be used to access menus and switch video mode when the remote control is not available.*

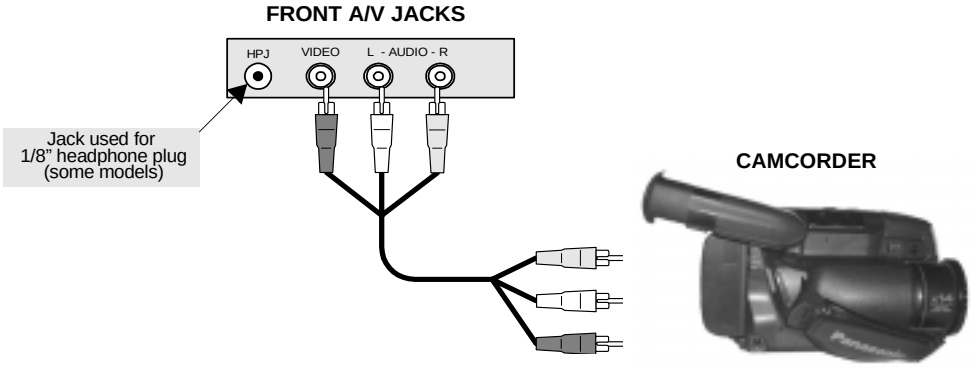

A second VCR, a video disc player, video game equipment and DSS equipment can also be connected to the video inputs. See the optional equipment manual for details.

Procedure

1. Connect equipment to front or rear Audio/Video input jacks.
2. Operate optional equipment as instructed in equipment manual.

   Note: *Front and rear Audio/Video connections cannot be operated at the same time.*

Remote Control Operation

(For models CT-2017 and CT-25G7 only.)

POWER
Press to turn ON and OFF.

VOL
Press to adjust TV sound and navigate in menus.

"0" ~ "9"
Press numeric keypad to select any channel or preset FM stations.

R-TUNE
Press to switch to previously viewed channel or video mode.

EUR501450
EUR501455

MUTE
Press to mute sound.

CH
Press to select next channel and navigate in menus.

ACTION
Press to access menus.

*TV/VIDEO/FM
Press to select TV, Video or FM mode.

RECALL
Press to display time, channel, sleep timer, and other options.

Note: **The TV/VIDEO/FM button is only for remote EUR501455. Remote EUR501450 has a TV/VIDEO button.*

Battery Installation

Use two AA batteries:

Remove battery cover by pushing in and up near arrow.
Install batteries matching (+) and (-) polarity signs.
Replace the battery cover.

Note: Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control

Precautions

- Replace batteries in pairs.
- Do not mix battery types (zinc carbon with alkaline).
- Do not recharge, heat, short-circuit, disassemble, or burn batteries.

Remote Control Operation

(For models CT-G2972, CT-G2972L, CT-G3352 and CT-G3352X only.)

POWER

POWER

Press to turn ON and OFF.

TV VCR DBS/CBL DVD

Press to select remote operation.

ACTION

Press to access menus.

TV/VIDEO

Press to select TV or Video mode.

MUTE

Press to mute sound. Press to display and cancel CC (Closed Caption).

1 2 3
4 5 6
7 8 9
0

Press numeric keypad to select any channel.

R-TUNE

Press to switch to previously viewed channel or video mode.

EUR511502

***LIGHT**

Press to illuminate remote buttons.

VOL ◄ ► VOL

Press to adjust TV sound and navigate in menus.

CH ▲
▼ CH

Press to select next or previous channel and navigate in menus.

EXIT

DBS functions button.

GUIDE

DBS functions button.

RECALL

Press to display time, channel, sleep timer, and other options.

REW	PLAY	FF
TV/VCR	STOP	PAUSE
REC	VCR/DBS CH	

Component function buttons

Battery Installation

Use two AA batteries:

Remove battery cover by pushing in and up near arrow.
Install batteries matching (+) and (-) polarity signs.
Replace the battery cover.

Note: Incorrect installation can cause battery leakage and corrosion that will damage the Remote Control

Precautions

- Replace batteries in pairs.
- Do not mix battery types (zinc carbon with alkaline).
- Do not recharge, heat, short-circuit, disassemble, or burn batteries.

*To prolong the life for the batteries, turn the light off and on by pressing R-TUNE and RECALL buttons, simultaneously.

Mode Operational Key Chart

This chart defines the keys that are operational in the selected component modes (TV, VCR, DBS, CABLE or DVD) after programming (if needed).

KEY NAME	TV MODE	CABLE MODE	DBS MODE
POWER	POWER	POWER	POWER
MUTE	MUTE	CBL MUTE	TV MUTE
TV/VIDEO	INPUT SWITCH	TV INPUT SWITCH	TV INPUT SWITCH
CHAN UP	CHANNEL UP	CABLE CHANNEL UP	DBS NAVIGATION UP
CHAN DOWN	CHANNEL DOWN	CABLE CHANNEL DOWN	DBS NAVIGATION DOWN
VOL RIGHT	VOL +	TV VOL +	DBS NAVIGATION RIGHT
VOL LEFT	VOL -	TV VOL -	DBS NAVIGATION LEFT
ACTION	ACTION	ENTER	DBS MENU
RECALL	DISPLAY	TV DISPLAY	DBS PROG. INFO
EXIT	-	-	DBS EXIT
GUIDE	-	-	DBS GUIDE
1	DIGIT 1	DIGIT 1	DIGIT 1
2	DIGIT 2	DIGIT 2	DIGIT 2
3	DIGIT 3	DIGIT 3	DIGIT 3
4	DIGIT 4	DIGIT 4	DIGIT 4
5	DIGIT 5	DIGIT 5	DIGIT 5
6	DIGIT 6	DIGIT 6	DIGIT 6
7	DIGIT 7	DIGIT 7	DIGIT 7
8	DIGIT 8	DIGIT 8	DIGIT 8
9	DIGIT 9	DIGIT 9	DIGIT 9
0	DIGIT 0	DIGIT 0	DIGIT 0
R-TUNE	PREVIOUS CHAN OR VIDEO MODE	CABLE PREVIOUS CHANNEL	PREVIOUS DBS CHANNEL
<<REW	VCR REWIND	-	-
PLAY	VCR PLAY	-	-
>>FF	VCR FAST FORWARD	-	-
PAUSE	VCR PAUSE	-	-
STOP	VCR STOP	-	-
RECORD	VCR RECORD	-	-
TV/VCR	TV/VCR SWITCH	-	-
VCR/DBSCHAN ▼	VCR CHANNEL DOWN	-	DBS CHANNEL DOWN
VCR/DBS CHAN ▲	VCR CHANNEL UP	-	DBS CHANNEL UP
LIGHT	REMOTE BUTTONS		

Mode Operational Key Chart (contd.)

KEY NAME	VCR MODE	DVD MODE
POWER	POWER	POWER
MUTE	TV MUTE	TV MUTE
TV/VIDEO	TV INPUT SWITCH	TV INPUT SWITCH
ACTION	-	SELECT
CHAN UP	-	NEXT CHAPTER
CHAN DOWN	-	PREVIOUS CHAPTER
VOL RIGHT	TV VOLUME +	NAVIGATION RIGHT
VOL LEFT	TV VOLUME -	NAVIGATION LEFT
RECALL	ONSCREEN VCR DISPLAY	DVD DISPLAY
EXIT	-	-
GUIDE	-	-
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
0	-	-
R-TUNE	-	-
<<REW	VCR REWIND	SKIP SEARCH <<
PLAY	VCR PLAY	DVD PLAY
>>FF	VCR FF	SKIP SEARCH FF>>
PAUSE	VCR PAUSE	DVD PAUSE
STOP	VCR STOP	DVD STOP
RECORD	VCR RECORD	-
TV/VCR	TV/VCR SWITCH	OPEN/CLOSE
VCR/DBS CHAN ▼	VCR CHANNEL DOWN	SLOW -
VCR/DBS CHAN ▲	VCR CHANNEL UP	SLOW +
LIGHT	REMOTE BUTTONS	

Programming The Remote

The Universal Remote Control can be programmed to operate many manufacturers' components, using the component function buttons for VCR, DVD, CABLE or DBS. Follow the procedures for programming your Remote Control with or without a code for the component.

Default Modes For Remote Control

Device	Operates	Default
TV	TV (Panasonic Only)	Panasonic TV Codes
VCR	VCR (Preset)	Panasonic VCR Codes
DBS	DBS (Preset)	Panasonic DBS Codes
CABLE	CABLE (Preset)	Panasonic DBS Codes
DVD	DVD, CD (Preset)	Panasonic DVD Codes

Determine the manufacturer of the component and look in the table for the code.

Programming With a Code

Procedure

- Confirm that the external component is plugged in and operating.
- Turn the component off.
- Press ACTION and POWER together, **for at least 5 seconds.**
- Press appropriate component button on the Remote Control VCR, DVD, CABLE or DBS.
- Enter the 3-digit component code using the Remote Control numeric keypad (0 ~ 9 buttons).
- Press the Remote Control POWER to test the component. If the procedure was successful, the component will turn on.

Helpful Hints: Unsuccessful Code
If the component does not operate with the Remote Control, repeat the procedure using another code. (Some brands have multiple codes). If an incorrect code is entered, or if the procedure takes longer than 30 seconds, the programming will fail.

Programming Without A Code

This procedure searches all codes and is called the "sequence method."

- Confirm that the external component is plugged in and on.
- Turn the component off.
- Press ACTION and POWER together, **for at least 5 seconds.**
- Press appropriate component button on the Remote Control.
- Press VOL▶ to move forward to the next code. Press ◀VOL to move backward.
- Press the Remote Control POWER to test the component. If the procedure was successful, the component will turn on.

  Note: *Repeat the above steps until the component code is found. It may take many attempts before the correct code is found.*

- After the code is found, press ACTION to store the code.

Component Codes

The Universal Remote Control is capable of operating many component brands after entering a code. Some components may not operate because the codes are not available due to limited memory. The Universal Remote Control does not control all features found in each model.

Write the code numbers from tables in this space. This will serve as a reference if you need to program your Remote Control.				
VCR	DVD	DBS	CABLE	

Codes For VCR

Brand	Code
Admiral	135
Aiwa	127, 132
Akai	114, 115, 116, 129
Audio Dynamic	111, 139
Bell & Howell	105, 113
Broksonic	120, 126
Canon	123, 125
Citizen	106
Craig	105, 106, 129
Curtis Mathes	124, 127, 145
Daewoo	175, 124, 143
DBX	110, 111, 139
Dimensia	145
Emerson	103, 119, 120, 125, 126, 143
Fisher	105, 107, 108, 109, 113
Funai	120, 126, 134
GE	124, 133,145
Goldstar	106
Gradiente	134
Hitachi	100, 123, 145
Instant Replay	123, 124
Jensen	139
JVC	110, 111, 134,139
Kenwood	306, 310, 311, 339
LXI	100, 105, 106,107, 108, 109
Magnavox	123, 124, 131
Marantz	110, 111, 139
Marta	106
Memorex	109, 124
MGA	138, 140, 141, 147,148
Minolta	100,145
Mitsubishi	138, 140, 141, 147, 148
Multitech	104, 147
NEC	110,111, 134, 139
Olympic	123, 124
Optimus	106, 121, 128, 135

Brand	Code
Orion	120, 126
Panasonic	121,122, 123, 124
J.C. Penney	100,105, 110, 111, 124, 139, 145
Pentax	100,111, 145
Philco	120, 123, 124, 126, 131, 143
Philips	123, 124, 131
Pioneer	123
Proscan	100, 101, 102, 123, 124, 131, 133, 145, 146
Quasar	121, 122, 123, 124
Radio Shack	105, 109, 124, 133, 136, 140
RCA	100, 101,102, 123, 124, 131, 133, 145, 146
Realistic	105, 109, 124, 136, 140
Samsung	102, 104, 133
Sansui	120, 126, 139, 152
Sanyo	105, 109, 113
Scott	101, 102, 104, 109, 120, 126, 138, 140, 147, 148
Sears	100, 105, 106, 107, 108
Sharp	135, 136
Shintom	117
Signature 2000	135
Singer	117
Sony	128, 129, 130
Sylvania	123, 124, 131
Tashiro	106
Tatung	110, 111, 139
Teac	110, 111, 139
Technics	121, 122, 123, 124
Teknika	124
Toshiba	101, 146
Vector Research	111
Wards	106, 109, 135, 136, 144
Yamaha	105, 110, 111, 139
Zenith	106,144

Component Codes (contd.)

Codes for Cable Box

Brand	Code
ABC	224
Archer	225, 232
Cableview	205, 232
Citizen	205, 222
Curtis	212, 213
Diamond	224, 225, 232
Eagle	229
Eastern	234
GC Brand	205,232
Gemini	222
General Instrument/ Jerrold	211, 219, 220, 221, 222, 224, 225, 226, 227
Hamlin	212, 218, 240, 241, 242, 245
Hitachi	203, 224
Macom	203, 204, 205
Memorex	230
Movietime	205, 232
Oak	202, 237,239
Panasonic	209, 210, 214
Philips	206, 207, 228, 229, 230
Pioneer	201, 216
Pulsar	205, 232

Brand	Code
Puser	232
RCA	215
Realistic	232
Regal	212, 218, 240, 241, 242, 245, 249
Regency	234
Rembrandt	205, 232, 237
Samsung	205
Scientific Atlanta	211, 212, 213
Slmark	201, 205
Sprucer	205, 210
Stargate	205, 232
Teleview	201, 205
Texscan	244
Tocom	235, 236, 247
Toshiba	204
Unika	225, 232
Universal	222, 232
Videoway	206
Viewstar	229, 230
Zenith	200, 227
Zenith / Drake Satellite	200

Codes for DVD

Brand	Code
Denon	100
Ferguson	101
JVC	109
Mitsubishi	105
Nordmende	101
Panasonic	100
Philips	103
Pioneer	102
RCA	101

Brand	Code
Saba	101
Samsung	110
Sharp	108
Sony	104
Thomson	101
Toshiba	103
Yamaha	100
Zenith	107

Codes for DBS

Brand	Code
Dish Network (Echostar)	105, 115, 116
Echo Star	105
G.E.	106
Gradiente	114
Hitachi	103, 111, 112
HNS (Hughes)	103

Brand	Code
Panasonic	104
Philips	101, 102
Primestar	108
RCA	106, 109, 110, 113
Sony	107
Toshiba	100
Uniden	101, 102

Icon Menu Navigation

Press to display the Icons.

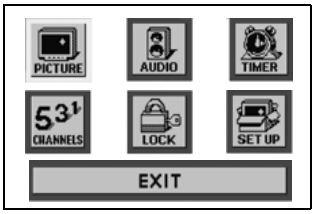

Press 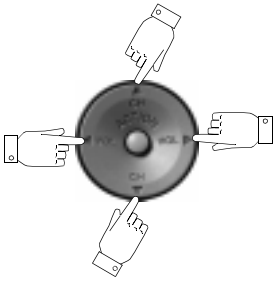 to select desired icon.

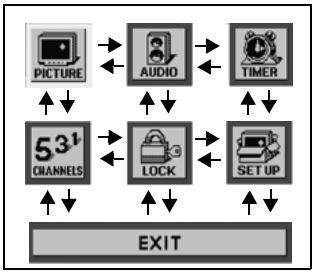

Press to display selected Icon features.

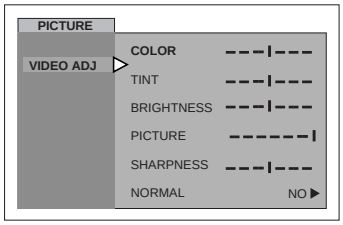

Press to select feature.

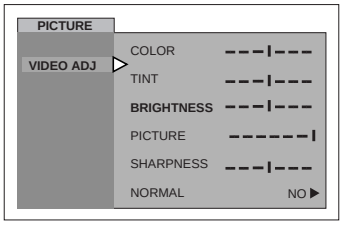

Press to adjust or activate feature.

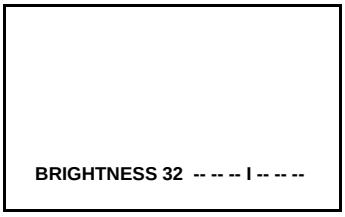

Press repeatedly to exit menus.

NORMAL PICTURE

Main Menu Icons

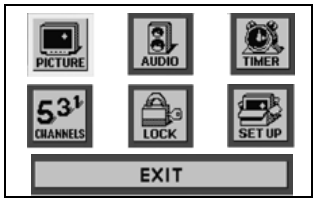

Icon Menus

These charts list all menus under each Icon and which pages to refer to for menus description.

Note: **Menus may vary depending on model.*

SET UP	REFER TO PAGE
IDIOMA/LANGUE ❒ MODE - (ENGLISH, FRANÇAIS, ESPAÑOL)	17
PROG CHAN ❒ MODE - (TV or CABLE) ❒ AUTO PROGRAM ❒ MANUAL PROGRAM ***Note:*** *The following features will appear for models with FM radio when in FM mode.* ❒ *FM ANTENNA ❒ *FM PROGRAM	17 27
CC (CLOSED CAPTIONED) ❒ CC MODE	18
OTHER ADJ. ❒ AUTO POWER	18

AUDIO	REFER TO PAGE
AUDIO ADJ. ❒ MODE (STERO, SAP or MONO) ❒ *BASS, TREBLE, BALANCE or NORMAL	20
OTHER ADJ. ❒ AI SOUND	20
***SURROUND** ❒ SURROUND	20
***SPEAKERS** ❒ ON ❒ OFF & VARIABLE AUDIO OUT ❒ OFF & FIXED AUDIO OUT	20

TIMER	REFER TO PAGE
CLOCK SET ❒ TIME	19
SLEEP ❒ HOW LONG?	19
TIMER ❒ DAY ❒ ON TIME ❒ OFF TIME ❒ ENTER CHANNEL	19

PICTURE	REFER TO PAGE
VIDEO ADJ ❒ COLOR, TINT, BRIGHTNESS, PICTURE, SHARPNESS OR NORMAL	18

CHANNELS	REFER TO PAGE
CAPTION ❒ MANUAL CAPTION	21

LOCK	REFER TO PAGE
MODE ❒ LOCK SET - (OFF or GAME) ❒ BLOCK PROGRAM ❒ HOW LONG?	23
V-CHIP OPERATION	24

Icon Menu Operation

SET UP

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

IDIOMA/LANGUE (Menu Languages**)**

In SET UP Menu, select IDIOMA/LANGUE to change menu language to ENGLISH, ESPAÑOL (Spanish) or FRANÇAIS (French).

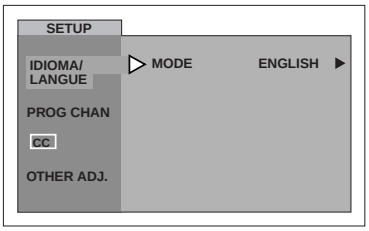

Press **VOL** ▶ to select English, Spanish or French.

Prog Chan (Program Channels)

In SET UP menu under PROG CHAN select:

- ❒ MODE - To select TV (antenna) or CABLE mode depending on the signal source.

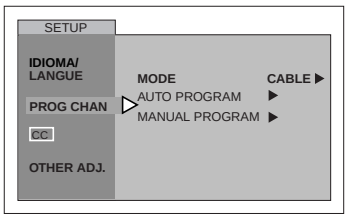

Press **VOL** ▶ to select TV or CABLE.

- ❒ AUTO PROGRAM - To automatically program all channels with a signal.

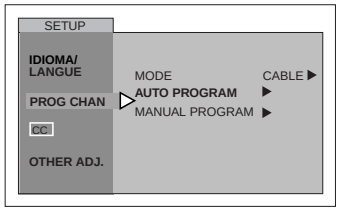

Press **VOL** ▶ to start AUTO PROGRAM.

- ❒ MANUAL PROGRAM - To manually add or delete channels.

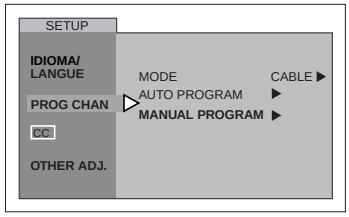

Press **VOL** ▶ to display next menu.

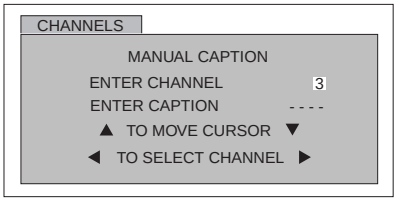

Note: *Use Remote numeric keypad to enter channel numbers.*

CC (Closed Captioning)

This television contains a built-in decoder that displays CC (Closed Captioned) text across the screen (white or colored letters on black background). It allows the viewer to read the dialogue of a television program or other information. The program viewed must include Closed Captioning for the feature to work.

CC Mode

Activates the onscreen Closed Caption feature by selecting one of the following modes.

- ❒ OFF - When Closed Caption is not desired.
- ❒ C1 - For video related information to be displayed, up to 4 lines onscreen at a time. (It does not block relevant parts of the picture). Text may be in any language.
- ❒ C2 - For other modes of video related information.

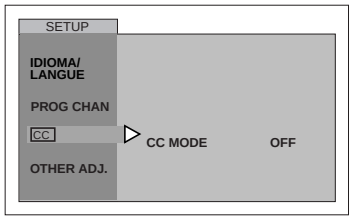

Press VOL▶ to select C1, C2, or OFF.

Note: *C1 mode is recommended for viewing Closed Caption.*

Other Adjustments

In SETUP Menu under OTHER ADJ. select:

- ❒ AUTO POWER ON - Select SET to power up the TV at the same time as the Cable box or other components or select OFF.

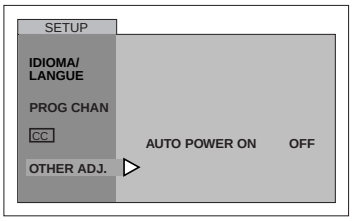

Press VOL▶ to select OFF or SET.

PICTURE

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

Video Adj.

In Picture menu under VIDEO ADJ. select:

- ❒ COLOR - Adjusts desired color intensity.
- ❒ TINT - Adjusts natural flesh tones.
- ❒ BRIGHTNESS - Adjusts dark areas of picture.
- ❒ PICTURE - Adjusts white areas of picture.
- ❒ SHARPNESS - Adjusts clarity of outline detail.
- ❒ NORMAL - Reset all picture adjustments to factory default settings.

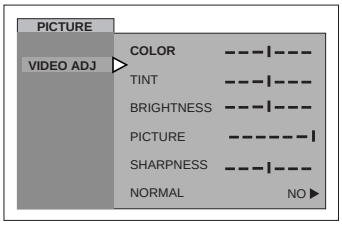

- ❒ Press CH▼ to select desired picture adjustment.
- ❒ Press ◀VOL or VOL▶ to adjust.

TIMER

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

Clock Set

Set the time of the day.

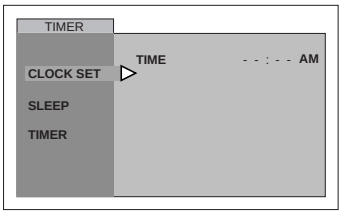

- ❒ Press ◀ VOL or VOL ▶ to select hours AM or PM.
- ❒ Press CH ▼ to select minutes position.
- ❒ Press ◀ VOL or VOL ▶ to select minutes.

Sleep Timer

In TIMER menu, Select SLEEP to turn television off in 30, 60 or 90 minutes. Select NO to turn off timer.

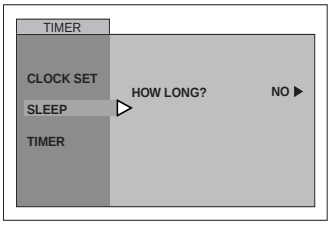

Press VOL ▶ to select 30, 60, 90 or NO.

Timer

In TIMER menu, select timer to turn the television on and off at selected times, on selected channels, and on selected days.TIME must be entered in CLOCK SET to operate the TIMER features.

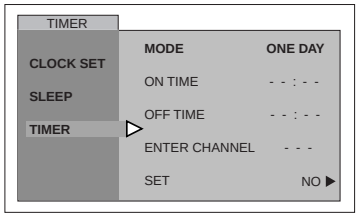

- ❒ Press VOL ▶ to select day or days.
- ❒ Press CH ▼ to select ON TIME, then press VOL ▶.
- ❒ Repeat for setting OFF TIME.
- ❒ Press CH ▼ to select ENTER CHANNEL, then press VOL ▶ to select channel.
- ❒ Press CH ▼ to select SET, then press VOL ▶ to select YES.

Turn Off After 90 Minutes
The television automatically turns OFF after 90 minutes when turned ON by the TIMER. If the OFF time is selected or if a key is pressed, the automatic OFF after 90 minutes will be cancelled.

TIMER Activation
The TIMER is active when the television is OFF or ON. The television will switch to the selected channel at the selected time set in the TIMER.

AUDIO

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

Audio ADJ.

- ❒ MODE - Select STEREO, SAP (Second Audio Program) or MONO. (Use MONO when stereo signal is weak).

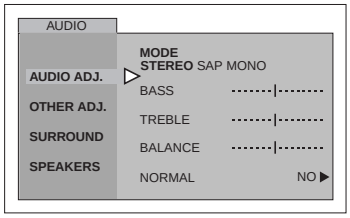

Press **VOL ▶** to select STEREO, SAP or MONO.

- ❒ BASS - Increase or decrease the bass response. (some models)
- ❒ TREBLE - Increase or decrease the treble response. (some models)
- ❒ BALANCE - Emphasize the left/right speaker volume. (some models)
- ❒ NORMAL - Reset BASS, TREBLE and BALANCE adjustments to factory default settings. (some models)

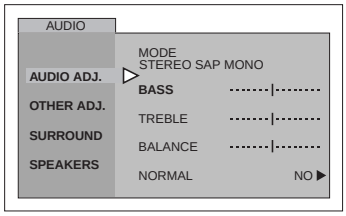

Press **◀ VOL** or **VOL ▶** to adjust.

Other ADJ.

- ❒ AI SOUND - Automatically maintain constant volume between programs and commercials.

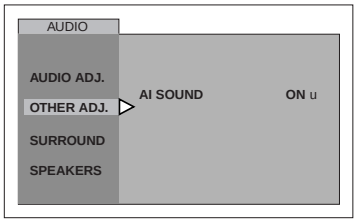

Press **VOL ▶** to select ON or OFF.

Surround (some models)

- ❒ Surround - Three dimensional surround sound with two speakers.

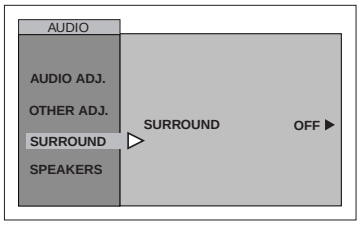

Press **VOL ▶** to select ON or OFF.

Speakers (some models)

In AUDIO menu under SPEAKERS.

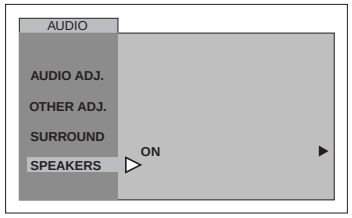

Press **VOL ▶** to select:

- ❒ ON - TV speakers operate normally.
- ❒ OFF & Variable Audio Out - TV speakers off - audio adjustable by television.
- ❒ OFF & Fixed Audio Out - TV speakers off - audio adjustable by the external amplifier only.

CHANNELS

Caption

❒ Manual Caption - To enter numbers and captions manually.

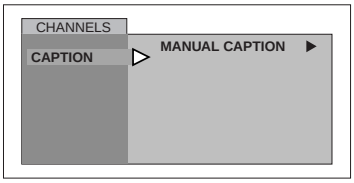

Press VOL ▶ to display next menu.

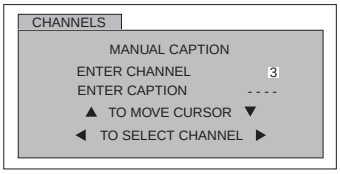

❒ Use remote numeric keypad to select desired channel (refer to your local TV guide).

❒ Press CH ▼ to select ENTER CAPTION.

❒ Press ◀ VOL or VOL ▶ to select characters.

LOCK

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

Mode

Lock Set

Select LOCK SET to prevent video games and VCR tapes from being viewed.

❒ Use the remote numeric keypad to enter a four-digit secret code (*Use a code that is easy to remember and record it in a safe place).*

Notes:

- If you do not remember your code, LOCK will unlock in 12, 24, or 48 hours, depending on the current setup. Be cautious when selecting ALWAYS. If ALWAYS is selected, and you forget your secret code, the TV must be serviced by a qualified technician to clear the LOCK setup.
- If you select CHANGE CODE, and you change your code from the one used in the LOCK menu, your new code becomes the controlling code.

❒ OFF - Turns Lock function off.

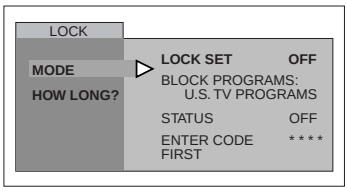

Press VOL ▶ to display LOCK MODE GAME menu.

❒ GAME - Lock CH 3, 4 and Video inputs.

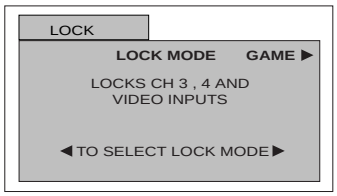

❒ Press ACTION ● twice.

❒ Press CH ▼ to highlight HOW LONG?.

❒ Press VOL ▶ to select 12 Hours, 24 Hours, 48 Hours or ALWAYS.

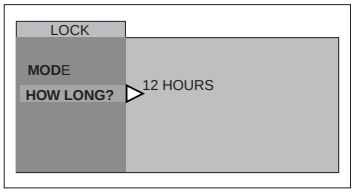

V-CHIP Menu Operation

Note: *Refer to page 15 for Icon Menu Navigation procedures.*

BLOCKING MESSAGE

If V-Chip is enabled and the program exceeds the rating limit set by you, the blocking message will appear and the audio will be muted. Enter your four-digit secret code if you wish to continue viewing the program. After entering your code, all locks and rating blocks are disabled until the TV is turned off or until all settings are off.

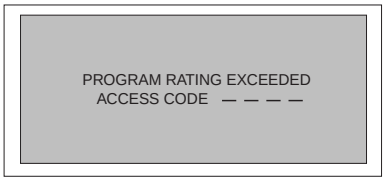

Note: *If you enter your four-digit secret code to override rating blocks, you must reset all rating blocks by either reprogramming or turning the TV off.*

U.S. TV PROGRAMS

This TV model features the "V-Chip technology" which allows you to use U.S. TV PROGRAMS Guide ratings to block various types of TV programs.

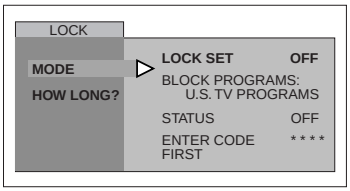

- ❒ Use the numeric keypad to enter your four digit code. **(*Use a code that is easy to remember and record it in a safe place.*)**
- ❒ Press CH ▼ to enter the BLOCK PROGRAMS field.
- ❒ Press ◀ VOL or VOL ▶ to select U.S. TV PROGRAMS.
- ❒ Press CH ▼ to highlight STATUS.
- ❒ Press ◀ VOL or VOL ▶ to display U.S TV PROGRAMS RATING CHART.

U.S. TV Programs Rating

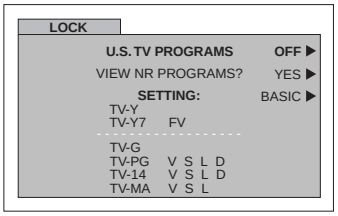

- ❒ Press VOL ▶ to select U.S. TV PROGRAMS ON or OFF.
- ❒ Press CH ▼ to select VIEW NR PROGRAMS?

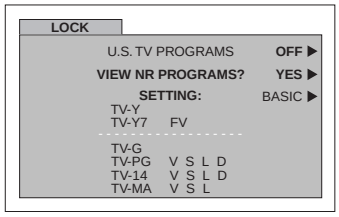

- ❒ Press VOL ▶ to select VIEW NR PROGRAMS? YES or NO.

Note: *Selecting "Yes", NR programs will be received. Selecting "NO", NR programs will be blocked. See Customer Caution below.*

- ❒ Press CH ▼ to select SETTING.

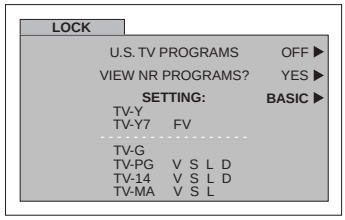

- ❒ Press VOL ▶ to select BASIC or DETAILED.

BASIC - Allows you to select only general ratings such as TV-Y, TV-PG, etc.

DETAILED - Allows you to select both general ratings and content such as V, L, etc.

U.S. TV Programs Menu Chart (cont'd)

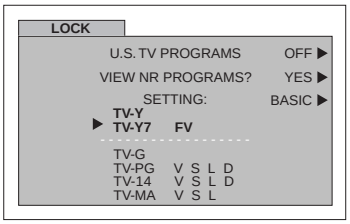

- ❒ Press CH ▲ or CH ▼ to move between different ratings.
- ❒ Use ◀ VOL or VOL ▶ to select ratings you want to block (RED) and unblock (GREEN).

Note: *See the U.S. TV PROGRAMS RATINGS CHART.*

- ❒ Press ACTION ● twice to return to MODE in Lock menu.
- ❒ Press CH ▼ to select HOW LONG?
- ❒ Press ◀ VOL or VOL ▶ to select 12, 24, 48 hours or ALWAYS.

Customer Caution
The V-Chip system that is used in this set is capable of blocking "NR" programs (non rated, not applicable and none) per FCC Rules Section 15.120(e)(2). If the option of blocking "NR" programs is chosen *"unexpected and possibly confusing results may occur, and you may not receive emergency bulletins or any of the following types of programming:"* • Emergency Bulletins (Such as EAS messages, weather warnings and others) • Locally originated programming • News • Political • Public Service Announcements • Religious • Sports • Weather

U.S. TV PROGRAMS RATINGS CHART

NR	**Not Rated. SEE CUSTOMER CAUTION on previous page.**
TV-Y	**All children.** The themes and elements in this program are specifically designed for a very young audience, including children from ages 2-6.
TV-Y7	**Directed to older children.** Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
TV-G	**General audience.** It contains little or no violence, no strong language, and little or no sexual dialogue or situations.
TV-PG	**Parental guidance suggested.** The program may contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	**Parents strongly cautioned.** This program may contain sophisticated themes, sexual content, strong language and more intense violence.
TV-MA	**Mature audiences only.** This program may contain mature themes, profane language, graphic violence, and explicit sexual content.
FV	**FANTASY/CARTOON VIOLENCE**
V	**VIOLENCE**
S	**SEX**
L	**OFFENSIVE LANGUAGE**
D	**DIALOGUE WITH SEXUAL CONTENT**

U.S. MOVIES

This TV model features the "V-Chip technology" which allows you to use Motion Picture Ratings when viewing movies or video tapes. This innovation allows parents to block various types of movies and video tapes at their discretion.

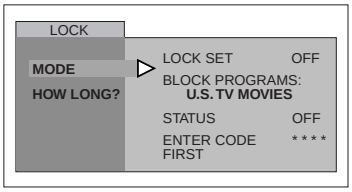

- ❒ Use the numeric keypad to enter your four digit code. (*Use a code that is easy to remember and record it in a safe place.*)
- ❒ Press CH ▼ to enter the BLOCK PROGRAMS field.
- ❒ Press ◀ VOL or VOL ▶ to select U.S. MOVIES.
- ❒ Press CH ▼ to highlight STATUS.
- ❒ Press ◀ VOL or VOL ▶ to display U.S MOVIES RATING CHART.

U.S. Movies Menu

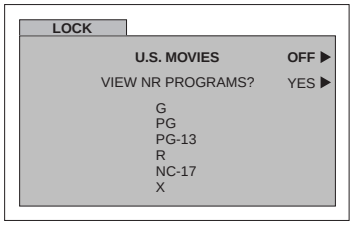

- ❒ Press VOL ▶ to select U.S. MOVIES ON or OFF.
- ❒ Press CH ▼ to select VIEW NR PROGRAMS?

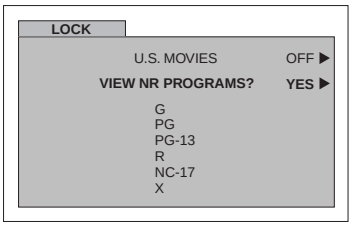

Press VOL ▶ to select VIEW NR PROGRAMS? YES or NO.

Note: *Some movies are not rated for a variety of reasons. Old movies and foreign films are usually not rated.*

- ❒ Press CH ▲ or CH ▼ to move between different ratings.
- ❒ Use ◀ VOL or VOL ▶ to select ratings you want to block (**RED**) and unblock (**GREEN**).

Note: *See the U.S. MOVIES CHART.*

- ❒ Press ACTION ● twice to return to MODE in Lock menu.
- ❒ Press CH ▼ to select HOW LONG?
- ❒ Press ◀ VOL or VOL ▶ to select 12, 24, 48 hours or ALWAYS.

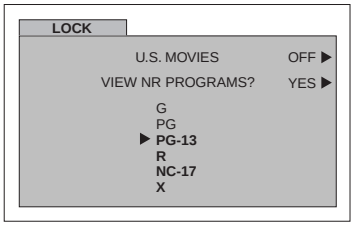

PG-13, R, NC-17 and X will be blocked.

U.S. MOVIES RATINGS CHART

NR	**CONTAINS NO RATING (NOT RATED) AND NA (NOT APPLICABLE) PROGRAMS**. Movie has not been rated or rating does not apply.
G	**GENERAL AUDIENCES.** All ages admitted.
PG	**PARENTAL GUIDANCE SUGGESTED.** Some material may not be suitable for children.
PG-13	**PARENTS STRONGLY CAUTIONED**. Some material may be inappropriate for children under 13.
R	**RESTRICTED.** Under 17 requires accompanying parent or adult guardian.
NC-17	**NO ONE 17 AND UNDER ADMITTED**.
X	**ADULTS ONLY.**

Rating Systems for Canada

Canadian English

The V-CHIP used in this TV model allows you to block various types of movies and television programs based on the two rating systems used in Canada.

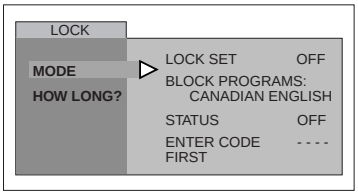

- ❒ Use the numeric keypad to enter your four digit code. (*Use a code that is easy to remember and record it in a safe place.*)
- ❒ Press CH ▼ to enter the BLOCK PROGRAMS field.
- ❒ Press ◀ VOL or VOL ▶ to select CANADIAN ENGLISH.
- ❒ Press CH ▼ to highlight STATUS.
- ❒ Press ◀ VOL or VOL ▶ to display CANADIAN ENGLISH RATING CHART.

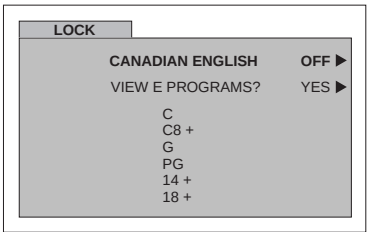

- ❒ Press VOL ▶ to select CANADIAN ENGLISH ON or OFF.
- ❒ Press CH ▼ to select VIEW E PROGRAMS?.

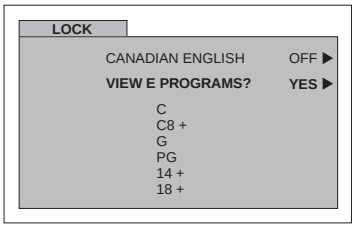

Press VOL ▶ to select VIEW E PROGRAMS? YES or NO.

Note: *E (Exempt) programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.*

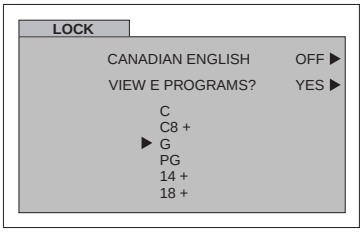

- ❒ Press ▲ CH or CH ▼ to move between different ratings.
- ❒ Use ◀ VOL or VOL ▶ to select ratings you want to block (**RED**) and unblock (**GREEN**).

Note: *See the CANADIAN ENGLISH RATINGS CHART.*

- ❒ Press ACTION ● twice to return to MODE in Lock menu.
- ❒ Press CH ▼ to select HOW LONG?.
- ❒ Press ◀ VOL or VOL ▶ to select 12, 24, 48 hours or ALWAYS.

CANADIAN ENGLISH RATINGS CHART

E	**Exempt -** Exempt programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.
c	**Programming intended for children under age 8.** No offensive language, nudity or sexual content.
C8+	**Programming generally considered acceptable for children 8 years and over.** No profanity, nudity or sexual content.
G	**General programming, suitable for all audiences.**
PG	**Parental Guidance suggested.** Some material may not be suitable for children.
14+	**Programming contains themes or content which may not be suitable for viewers under the age of 14. Parents are strongly cautioned to exercise discretion in permitting viewing by pre-teens and early teens.**
18	**ADULTS ONLY**

Canadian French

The V-CHIP used in this TV model also lets you block or unblock Canadian French programs according to various ratings categories.

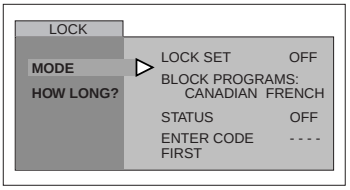

- ❒ Use the numeric keypad to enter your four digit code. (*Use a code that is easy to remember and record it in a safe place.*)
- ❒ Press CH ▼ to enter the BLOCK PROGRAMS field.
- ❒ Press ◀ VOL or VOL ▶ to select CANADIAN FRENCH.
- ❒ Press CH ▼ to highlight STATUS.
- ❒ Press ◀ VOL or VOL ▶ to display CANADIAN FRENCH menu rating chart.

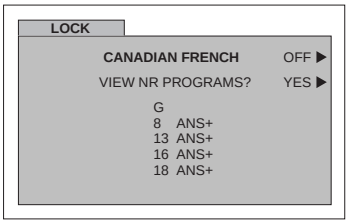

- ❒ Press VOL ▶ to select CANADIAN FRENCH ON or OFF.
- ❒ Press CH ▼ to select VIEW E PROGRAMS?

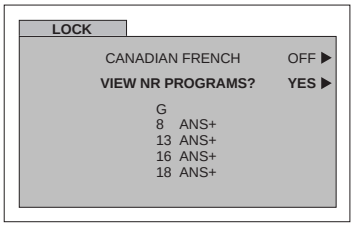

Press VOL ▶ to select VIEW E PROGRAMS? YES or NO.

Note: *E (Exempt) programming includes: news, sports, documentaries and other information programming, talk shows, music videos, and variety programming.*

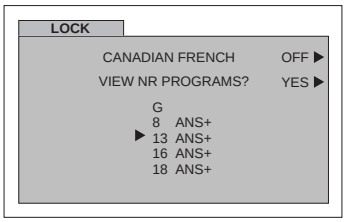

13ANS+, 16ANS+ and 18ANS+ will be blocked

- ❒ Press CH ▲ or CH ▼ to move between different ratings.
- ❒ Use ◀ VOL or VOL ▶ to select ratings you want to block (**RED**) and unblock (**GREEN**).

Note: *See the CANADIAN FRENCH RATING CHART.*

- ❒ Press ACTION ● twice to return to MODE in Lock menu.
- ❒ Press CH ▼ to select HOW LONG?
- ❒ Press ◀ VOL or VOL ▶ to select 12, 24, 48 hours or ALWAYS.

CANADIAN FRENCH RATINGS CHART

E	**Exempt -** Exempt programming.
G	**General -** Programming intended for audience of all ages. Contains no violence, or the violence content is minimal or is depicted appropriately.
8 ans +	**8+ General -** Not recommended for young children. Programming intended for a broad audience but contains light or occasional violence. Adult supervision recommended.
13 ans +	**Programming may not be suitable for children under the age of 13 -** Contains either a few violent scenes or one or more sufficiently violent scenes to affect them. Adult supervision strongly suggested.
16 ans +	**Programming may not be suitable for children under the age of 16 -** Contains frequent scenes of violence or intense violence.
18 ans +	**Programming restricted to adults.** Contains constant violence or scenes of extreme violence.

FM Radio Operation

(For model CT-25G7 only.)

Some televisions have built-in FM tuner. You can pre-program up to 9 different FM stations for easy access.

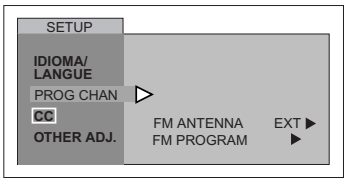

- ❒ Press TV/VIDEO button on the remote control twice to get into FM mode.
- ❒ Press ACTION button to display MENU Icons.
- ❒ Press ▲▼ or ◀▶ to highlight the SET UP icon.
- ❒ Press ACTION button to display the SET UP menu.
- ❒ Press ▲ or ▼ button to highlight PROG CHAN.
- ❒ Press ▶ button to highlight FM ANTENNA

.

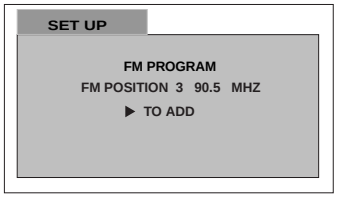

- ❒ Press ◀ or ▶ button to select INT (INTERNAL) or EXT (EXTERNAL).
  - INT - For Cable TV users.
  - EXT - For Antenna users.
- ❒ Press ▼ button to highlight FM Program.
- ❒ Press ▶ button to display FM PROGRAM screen
- ❒ Press numeric keys 1 through 9 on the remote control to select the appropriate FM position.
- ❒ Press ▲ or ▼ button to select the desired FM frequency.
- ❒ Press ▶ button to add the station to memory.
- ❒ Repeat steps 10 through 12 until all 9 positions have been programmed into memory.
- ❒ Press ACTION button to exit the programming menu.

Note: *You can select any of the 9 stations by pressing the appropriate number button on the remote control, while in FM mode.*

Helpful Hint:
In FM mode, at no volume or in Mute mode, there is no indication of the set being ON. Volume should be kept at audible level.

Tuning FM station manually

In FM mode, press ▲ or ▼ button to change the station frequency.

Note: *While in FM mode, press **R-TUNE** button to toggle between TV and FM radio mode.*

Troubleshooting Chart

Before calling for service, determine the symptoms and follow suggested solutions.

AUDIO	VIDEO	Solutions
Noisy Audio	Snowy Video	Adjust Antenna Location and Connection
Noisy Audio	Multiple Image	Adjust Antenna Location and Connection Check Antenna Lead-in Wire
Noisy Audio	Interference	Move television from Electrical Appliances, Lights, Vehicles and Medical Equipment
No Audio	Normal Video	Increase Volume Check Mute Check television SPEAKERS on/off Change Channel
Noisy Audio	 No Video with Snow	Set TV or Cable Mode Properly Check Antenna Cables
No Audio	No Video	Check Power Cord is Plugged into Active Outlet Adjust Brightness and Audio Controls Change Channel Check Cable Connections Program the Remote Control Again Check Second Video Source Operation
Normal Audio	No Color	Adjust Color Settings Change Channel
Wrong Audio	Normal Video	Check Audio Is Set To Stereo or Mono, Not SAP
Normal Audio	 Black Box on Screen	Change CC (Closed Captioning) from Text Mode
Normal Audio	Normal Video	Replace Remote Control Batteries
Intermittent Remote Control Operation		

PANASONIC CONSUMER ELECTRONICS COMPANY,
DIVISION OF:
MATSUSHITA ELECTRIC CORPORATION OF AMERICA
One Panasonic Way
Secaucus, New Jersey 07094

PANASONIC SALES COMPANY,
DIVISION OF:
MATSUSHITA ELECTRIC OF PUERTO RICO, INC., Ave. 65 de Infanteria, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

Panasonic Color Television
Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

TV CATEGORIES	ALL PARTS EXCEPT CRT	CRT	LABOR	SERVICE
9”-21” diagonal	1 (ONE) YEAR	2 (TWO) YEARS	90 DAYS	CARRY-IN
22”-27” diagonal	1 (ONE) YEAR	2 (TWO) YEARS	90 DAYS	IN-HOME OR CARRY-IN

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must carry-in your product or arrange for in-home service (in-home service available only for 22” [diagonal] and larger screen), as applicable, during the warranty period. If non-rechargeable batteries are included, they are not warranted. This warranty only applies to products purchased and serviced in the United States or Puerto Rico. This warranty is extended only to the original purchaser of a new product which was not sold "as is". A purchase receipt or other proof of the original purchase date is required for warranty service.

Carry-in or In-Home Service

For Carry-In or In-Home Service (as applicable) in the United States call 1-800-211-PANA(7262) or visit Panasonic Web Site: http://www.panasonic.com
For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

In-Home service, if applicable, requires clear, complete and easy access to the product by the authorized servicer and does not include removal or re-installation of an installed product. It is possible that certain in-home repairs will not be completed in-home, but will require that the product, or parts of the product, be removed for shop diagnosis and/or repair and then returned.

Limited Warranty continued on next page

Limited Warranty continued from previous page

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage, nor does it cover markings or retained images on the picture tube resulting from viewing fixed images (including, among other things, letterbox pictures on standard 4:3 screen TV's, or non-expanded standard 4:3 pictures on wide screen TV's, or onscreen data in a stationary and fixed location). The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Servicenter or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, or travel to and from the servicer. The items listed are not exclusive, but are for illustration only.) **ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the warrantor's Consumer Affairs Department at the addresses listed for the warrantor.

PARTS AND SERVICE (INCLUDING COST OF AN IN-HOME SERVICE CALL, WHERE APPLICABLE) WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY ARE YOUR RESPONSIBILITY.

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9am - 9pm; Saturday-Sunday 9am - 7pm, EST.

Web Site: http://www.panasonic.com
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Service in Puerto Rico
Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicenter:
Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

Index

A

AC Power Supply Cord 3
Accessory Purchases 31
AI Sound 20
Amplifier Connection 6
Antenna Connection 3
Audio 20
Auto Power On 18
Auto Program 17
Auto Set Up Menu 5

B

Balance 20
Bass 20
Battery Installation 9
Brightness 18

C

Cabinet and Remote Control 2
Cable / Antenna Connection 3
Care and Cleaning 2
Caution 3
Channels 21
Clock Set 19
Closed Captioning 18
Codes for Cable Box 14
Codes for DBS 14
Codes for DVD 14
Codes for VCR 13
Color 18
Component Codes 13
Congratulations 2
Customer Record 2
Customer Services Directory 31

D

Default Modes for Remote Control 12

F

Feature Comparison Chart 4
FM Radio Operation 27
Front Control Panel 7

G

Game 21

I

Icon Menu Navigation 15
Icon Menu Operation 17
Icon Menus 16
Installation 3

L

Limited Warranty 29, 30
Lock 21
Lock Set 21

M

Main Menu Icons 16
Manual Program 17
Menu Languages 17
Mode Operational Key Chart 10
Mono 20

N

Normal 20

O

Optional Cable Connections 3

P

Picture 18
Product Information 31
Prog Chan 17
Programming The Remote 12
Programming Without A Code 12

R

Rating Systems for Canada 25
Remote Control Operation 8, 9

S

SAP 20
Servicenters
Sharpness 18
Sleep Timer 19
Speakers 20
Specifications 2
Stereo 20
Surround 20

T

Television Location 3
Time 19
Timer 19
Tint 18
Treble 20
Troubleshooting Chart 28
Tuning FM station manually 27
TV or Cable 5

U

U.S. Movies 23
U.S. Movies Menu 24
U.S. Movies Ratings Chart 24
U.S. TV Programs 22
U.S. TV Programs Rating 22

V

V-Chip Menu Operation 22
VCR Connection 6
VHF/UHF Antenna 3
Video Adj. 18

W

Warranty 29, 30

Panasonic Consumer Electronics Company,
Division of Matsushita
Electric Corporation of America
One Panasonic Way
Secaucus, New Jersey 07094
www.panasonic.com

Panasonic de Mexico, S.A, de C.V.
Amores No. 1120
Col. Del Valle C.P. 03100
México, D.F.
Tel. (0155) 5488-1000
Fax (0155) 5575-6763, 5575-6765

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico Inc. ("PSC")
Ave. 65 de Infantería, Km 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel. (787) 750-4300
Fax (787) 768-2910

Panasonic®

Televisor a color
Instrucciones de Operación

CT-2017
CT-25G7
CT-25G7U

CT-G2132
CT-G2132L
CT-G2172
CT-G2172L

CT-G2972
CT-G2972L
CT-G3352
CT-G3352X

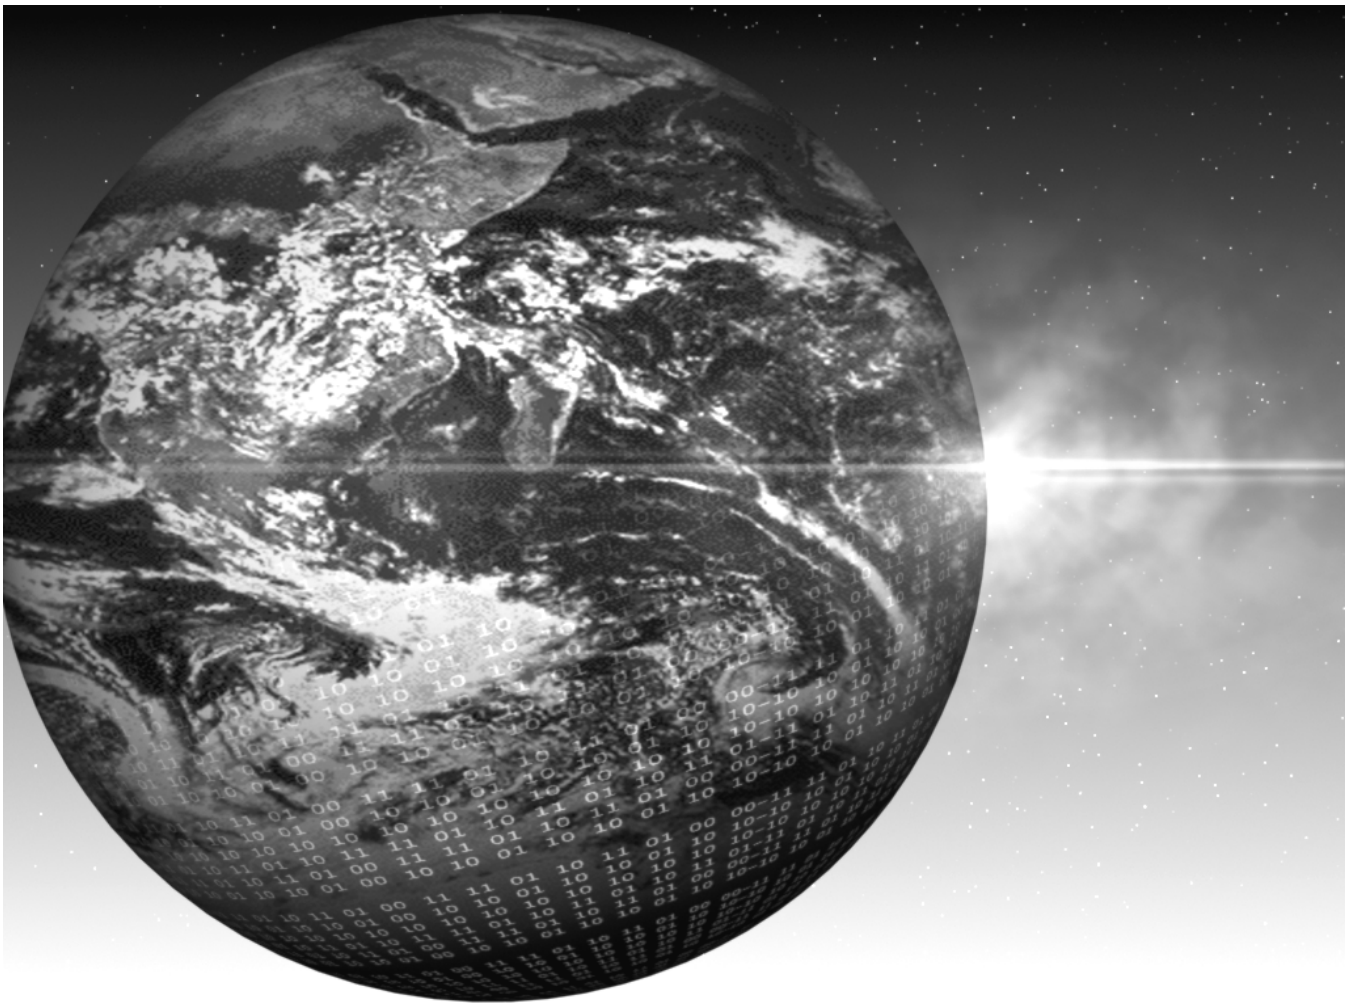

Para asistencia llame al teléfono: 1-800-211-PANA (7262)
o envíe un correo electrónico a la dirección:
consumerproducts@panasonic.com (Solo en Estados Unidos)

TQB2AA0370-2 20325
PRINTED IN USA

ADVERTENCIA

RIESGO DE SACUDIDAS ELECTRICAS. NO ABRIR.

ADVERTENCIA: A fin de reducir el riesgo de sacudidas eléctricas, no deberán quitarse ni la cubierta ni la tapa posterior. No hay en el interior pieza alguna que el usuario tenga que reparar. Todo servicio habrá de brindarlo personal de reparación capacitado.

El propósito del relámpago con punta de flecha dentro de un triángulo es el de advertir al usuario de que existen piezas internas del producto que representan riesgo de que las personas reciban sacudidas eléctricas.

El propósito del signo de exclamación dentro de un triángulo es el de advertir al usuario de que los documentos que acompañan al aparato incluyen importantes instrucciones de funcionamiento y reparación.

ADVERTENCIA: Con el objeto de prevenir el riesgo de incendio o de sacudida eléctrica, este aparato no deberá verse expuesto a la lluvia ni a la humedad.

El simbolo de doble insulación (un cuadro dentro de otro cuadro) es con la intención de alertar al personal de servicio calificado a usar partes de reemplazo idénticas únicamente en este aparato.

Aviso de la FCC: **Cualquier cambio o modificación a este receptor de TV no aprovado expresamente por Matsushita Electric Corporation of America podria provocar interferencia dañina, que nulificaría la autoridad del usuario para operar este equipo.**

AVISO AMBIENTAL: **Este producto utiliza un tubo de rayos catódicos (TRC) así como otros componentes que contienen plomo. El desecho de estos materiales puede estar regulado en su comunidad debido a consideraciones ambientales. Para información de desecho o reciclaje contacte a sus autoridades locales, o a la alianza de industrias electrónicas: <HTTP://WWW.EIAE.ORG.>**

Indice

Felicidades 2
Registro del Usuario 2
Cuidado y limpieza 2
Especificaciones 2
Instalación 3
Ubicación de la Televisión 3
Conexiones de Cable Opcional 3
Cable de Suministro de Corriente Alterna 3
Conexión de Cable / Antena 3
Tabla de Comparación de Características 4
Menú de Auto Programación 5
Conexiones de Equipo Opcional 6
Videocasetera 6
Conexión del Amplificador (TO AUDIO AMP) 6
Conexión del Decodificador de Televisión
Panel de Control Frontal 7
Operación del Control Remoto (CT-G2132, CT-G2132L, CT-G2172 y CT-G2172L solamente) 8
Instalación de Pilas en el Control Remoto 8
Operación del Control Remoto (CT-G2972, CT-G2972L, CT-G3352 y CT-G3352X solamente) 9
Instalación de Pilas en el Control Remoto 9
Tabla del Modo Operacional de las Teclas 10
Programando el Control Remoto 12
Programando Sin Código 12
Códigos de Componentes 13
Navegación del Menú de Iconos 15
Menú de Iconos Principal 16
Menús de iconos 16
Operación del Menú de Iconos 17
Ajuste 17
Imagen 18
Cronómetro 19
Audio 20
Canales 21
Bloqueo 21
Operación del Menú de V-Chip 22
Recepción de Radio FM (CT-25G7 solamente) 27
Cuadro de Localización de Fallas 28
Guia de Servicios Tecnicos 29
Indice 30

Lea estas instrucciones completamente antes de operar la Televisión.

El contenido está sujeto a cambios sin previo aviso u obligación.

Derechos Reservados 2002 por Matsushita Electric Corporation of America.
Todos los Derechos Reservados. La copia y distribución sin autorización es violación de la ley.

Felicidades

Su nuevo Televisor Monitor/Receptor se caracteriza por un chasis de estado sólido que está diseñado para brindarle satisfacción por muchos años. Ha sido probada completamente en la fábrica para su mejor desempeño.

Registro del Usuario

Los números de modelo y de serie de esta unidad se encuentran en la parte posterior de la Televisión. Se recomienda que anote dichos números en los espacios que se proporcionan y se conserven como registro permanente de su compra. Esto le ayudará a identificarlo en caso de robo o pérdida.

Número de Modelo

Número de Serie

Cuidado y limpieza

Pantalla (Apagar la Televisión)

- Use una solución de jabón suave o limpiador de vidrios con un paño suave y limpio. NO USE LIMPIADORES ABRASIVOS.
- Evite la humedad excesiva y seque bien.

Nota: *Evite rociar cualquier tipo de limpiadores directamente sobre la pantalla.*

Gabinete y Control Remoto

- ❒ Para control remoto y gabinetes de plástico, use un paño suave humedecido con agua o una solución detergente suave. Evite exceso de humedad y frote hasta secar.
- ❒ No use benceno, diluyentes u otros productos a base de petróleo.

Especificaciones

Fuente de Potencia **CT-2017 (1,4A)** **CT-25G7 (1,8A)** **CT-25G7U (1,8A)** **CT-G2132 (1,4A)** **CT-G2172 (1,5A)** **CT-G2972 (2,0A)** **CT-G3352 (2,0A)**	120V AC, 60Hz
CT-G3352X (2,0A)	127ca 60Hz
CT-G2132L (1,5A) **CT-G2172L (1,6A)** **CT-G2972L (2,0A)**	Auto (110Vca-220Vca) 50/60Hz
Capacidad de Canales - 181	VHF-12; UHF-56; Cable-113
Terminales de Entrada de Vídeo	1Vp-p, 75 Ohmios, Estilo fonográfico
Terminales de Entrada de Audio	500mV RMS 47Kilo Ohmios
Terminales de Salida de Audio (algunos modelos)	0-2,0V RMS 4,7Kilo Ohmios
Terminales de Entrada S-Vídeo (algunos modelos)	Conector S-Vídeo (Y-C)

Las especificaciones están sujetas a cambio sin previo aviso ni obligación alguna.

Instalación

Ubicación de la Televisión

Esta unidad tiene como propósito ser usada como parte de un centro de entretenimiento. Consulte a su distribuidor para obtener opciones disponibles.

- ❒ Evite el exceso de luz del sol u otras luces brillantes, incluyendo reflejos.
- ❒ Mantenga alejada la unidad del exceso de calor o humedad. La ventilación inadecuada puede causar fallas en componentes internos.
- ❒ La iluminación fluorescente puede reducir el rango de transmisión del control remoto.
- ❒ Evite el equipo magnético, incluyendo motores, ventiladores o altavoces externos.

PRECAUCIÓN: Use únicamente con el mueble, mesa, cómoda o librero especificado por el fabricante o comprado con el aparato. Si mueve el mueble con el aparato sobre de el, tenga mucho cuidado de que el aparato no caiga sobre usted al empujar. Para evitar lesiones a infantes, nunca coloque el televisor en muebles que puedan ser inclinados o movidos por un niño.

Conexiones de Cable Opcional

Cables blindados de audio y video deben usarse entre los componentes. Para obtener mejores resultados:

- ❒ Use cable coaxial blindado de 75 ohmios.
- ❒ Use los conectores de entrada y salida apropiados, iguales a los de su componente.
- ❒ Evite el uso de cables largos para minimizar interferencia.

Cable de Suministro de Corriente Alterna

PRECAUCION: PARA PREVENIR UNA DESCARGA ELECTRICA, BUSQUE LA CLAVIJA ANCHA DEL ENCHUFE E INSERTELA POR COMPLETO EN LA RENDIJA ANCHA DE LA TOMA DE CORRIENTE ALTERNA. NO USE ESTE ENCHUFE CON UN RECEPTACULO U OTRA TOMA DE CORRIENTE SALVO QUE LA CLAVIJA SE PUEDA INSERTAR POR COMPLETO PREVINIENDO QUE SE EXPONGA LA CLAVIJA.



Enchufe polarizado

PROTEJA EL CABLE DE AC DE SER PISADO, ENRROLLADO, PLEGADO, TROZADO O PERFORADO, PARTICULARMENTE EN LOS CONECTORES Y EN LOS PUNTOS DONDE SALE DEL APARATO.

Conexión de Cable / Antena

Para una recepción adecuada, se requiere una conexión de cable o de antena.

Conexión de cable

Conecte el cable suministrado por su compañía local de cable.

Nota: *Se puede requerir de un decodificador de cable para una recepción adecuada. Verifique con su compañía de cable local sobre los requisitos de compatibilidad.*

Conexión de Antena

- Para una recepción adecuada de canales VHF/UHF, se requiere de una antena externa. Para la mejor recepción, se recomienda una antena en el exterior.
- La Modalidad de Antena debe estar ajustada en televisión.

Nota: *La Modalidad de Cable está predispuesta de fábrica. Usuarios de antena deberán cambiar a Modalidad de Antena en el menú de Ajuste (SETUP).*

Antena VHF/UHF

Una antena VHF/UHF y su transformador se incluyen en algunos modelos. Coloque en la televisión, ajuste la antena hasta que la imagen sea clara. (Vea la conexión de Antena).

Cable de Entrada de la Compañía de Cable



75 Ohmios VHF/UHF en la parte posterior de la TV

Cable de Entrada de una Antena de Casa

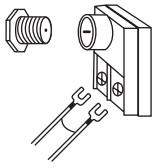

Tabla de Comparación de Características

	MODELOS	CT-G2132	CT-G2132L	CT-G2172	CT-G2172L	CT-G2972	CT-G2972L	CT-G3352	CT-G3352X	CT-2017	CT-25G7
	CARACTERISTICAS										
CARACTERÍSTICAS ESPECIALES	LENGUAJE DEL MENÚ ENG/ESP/FRAN	❒	❒	❒	❒	❒	❒	❒	❒	❒	❒
	SUBTITULACION	❒	❒	❒	❒	❒	❒	❒	❒	❒	❒
	CAPACIDAD DEL V-CHIP	❒	❒	❒	❒	❒	❒	❒	❒	❒	❒
	ENTRADA DE 75 OHM	❒	❒	❒	❒	❒	❒	❒	❒	❒	❒
	ANTENA INCLUIDA	❒	❒	❒	❒						
	ADAPTADOR DE 75 OHM INCLUIDO	❒	❒	❒	❒						
	VIDEO NORM	❒	❒	❒	❒	❒	❒	❒	❒	❒	❒
AUDIO	AUDIO NORM			❒	❒	❒	❒	❒	❒		
	BAJOS/BALANCE/AGUDOS			❒	❒	❒	❒	❒	❒		
	ESTEREO			❒	❒	❒	❒	❒	❒	❒	❒
	RADIO FM										❒
	SONIDO IA			❒	❒	❒	❒	❒	❒	❒	❒
	ENVOLVENTE			❒	❒	❒	❒	❒	❒		
	SALIDA AUDIO			❒	❒	❒	❒	❒	❒		
	NUMERO DE BOCINAS	2	2	4	4	4	4	2	2	2	2
CONECTORES DE A/V	ENTRADA A/V (POSTERIOR/DELANTERA)	1 (1/1)	1 (1/1)	2 (2/1)	2 (2/1)	2 (2/1)	2 (2/1)	2 (2/1)	2 (2/1)	1 (1/1)	1 (1/1)
	ENTRADA S-VHS			❒	❒	❒	❒	❒	❒		
	CONECTOR DE AUDIFONOS	❒	❒								
	SALIDA PARA AUDIFONO			❒	❒	❒	❒	❒	❒	❒	❒

INFORMACIÓN IMPORTANTE ACERCA DEL USO DE VIDEO JUEGOS, COMPUTADORAS, U OTROS TIPOS DE IMÁGENES FIJAS.

ADVERTENCIA: El marcado o retención de imágen en los tubos de proyección como resultado del uso de una imágen fija no es un defecto de operación y como tal no está cubierto por la garantía.

Este televisor esta diseñado para desplegar imágenes en movimiento constante en la pantalla. El uso constante de imágenes fijas tal como peliculas en formato letterbox en pantallas estándar (con barras arriba y abajo de la imágen), peliculas estándar no expandidas (4:3) en TV's de pantalla ancha (con barras laterales visibles a cada lado de la imágen), barras de reporte de la bolsa mercantil (barra con información en movimiento en la parte inferior de la pantalla), patrones de video juegos, marcadores deportivos fijos, logos de estación televisora, patrones de internet u otros patrones de tipo computadora deben limitarse.

El uso extendido de material de imágen fija puede causar daño permanente a los tubos de proyección, el cual se presenta como 'imágen fantasma" visible en la imágen normal. Este tipo de desgaste irreversible de los tubos de proyección puede limitarse mediante los siguientes pasos:

- No utilice la imagen fija por periodos largos de tiempo.
- Apague la unidad cuando no se este usando.

Menú de Auto Programación

Para su conveniencia, el menú de auto programación será desplegado en pantalla cuando el set sea encendido por primera vez. De ser necesario, siga los menús y los procedimientos para ajustar las caracteristicas.

- ❒ IDIOMA/LANGUE - Seleccione el idioma del menú ENGLISH (Inglés), ESPAÑOL o FRANCAIS (Francés).

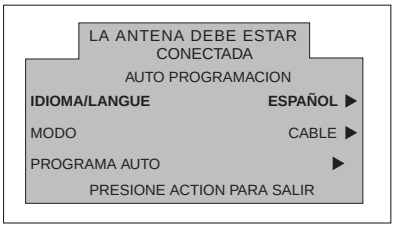

Presione **VOL** ▶ para seleccionar menú en Inglés, Español, o Francés

- ❒ MODO - Para seleccionar la modalidad de TV (antena) o CABLE dependiendo de la fuente de la señal.

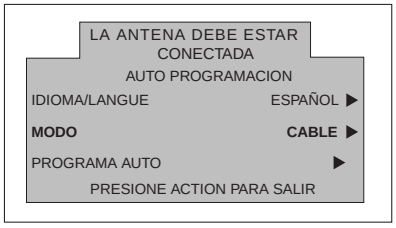

Presione **VOL** ▶ para seleccionar modo deTELEVISIÓN o CABLE.

- ❒ PROGRAMA AUTO - Para programar automáticamente todos los canales con señal.

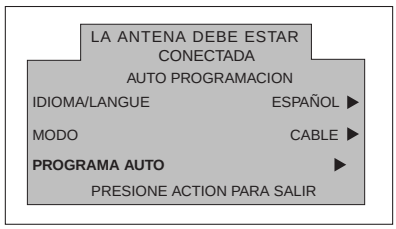

Presione **VOL** ▶ para iniciar la programación automática de canales.

Conexiones de Equipo Opcional

Conexión de la Videocasetera

Conecte el equipo como se muestra a la parte frontal o posterior de la entrada de Audio/Video.

Nota: *Conexiones de Audio/Video frontales y de la parte posterior no pueden usarse al mismo tiempo.*

1. Seleccione la Modalidad de Vídeo presionando el botón de TV/VIDEO.
2. Opere el equipo opcional tal como se instruye en el manual del equipo.

Nota: *Videocaseteras, equipo de videodiscos, equipo de videojuegos y teletexto pueden también ser conectados a la entrada de conexión de antena. (Vea el manual de su equipo.)*

CONEXIONES EN LA PARTE POSTERIOR DE LA TELEVISION

Nota: *Puede variar segun el modelo.*

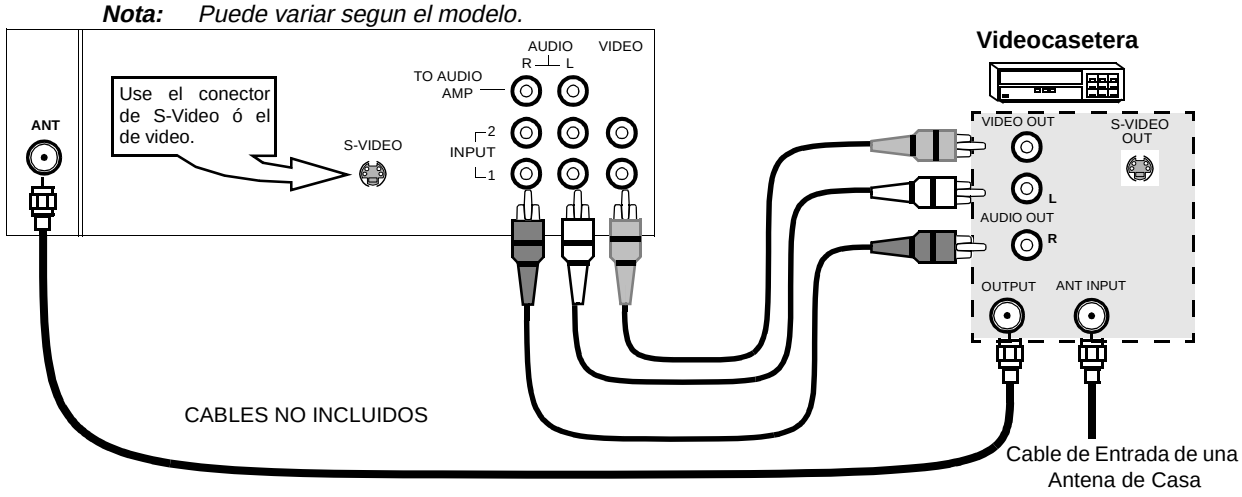

Nota: *El control remoto debe ser programado con los códigos que se incluyen para operar la videocasetera.*

Conexión del Amplificador (TO AUDIO AMP)

Para escuchar el sonido a través de un sistema estéreo separado, conecte un amplificador externo a las conexiones TO AUDIO AMP en la parte posterior de la televisión.

Nota: *Las conexiones TO AUDIO AMP no pueden ser conectadas directamente a altavoces (bocinas) externas.*

Ajustes de Audio

1. Seleccione en la pantalla ALTAVOCES SI en el menú de AUDIO (SONIDO).
2. Ajuste el volumen del amplificador al mínimo.
3. Ajuste el volumen de la televisión al nivel deseado.
4. Ajuste el volumen del amplificador hasta igualar el de la televisión.
5. Seleccione ALTAVOCES APAGADAS Y SALIDA DE AUDIO VARIABLE en el menú de AUDIO (SONIDO).
6. Ahora puede controlar el volumen, el silencio, los bajos, los altos, y el balance usando la televisión.

Nota: *Seleccione ALTAVOCES APAGADAS Y SALIDA DE AUDIO FIJA para controlar las funciones de audio a través del amplificador externo.*

CONEXIONES EN LA PARTE POSTERIOR DE LA TELEVISION

Nota: *Para modelos con conectores de audio TO AUDIO AMP*

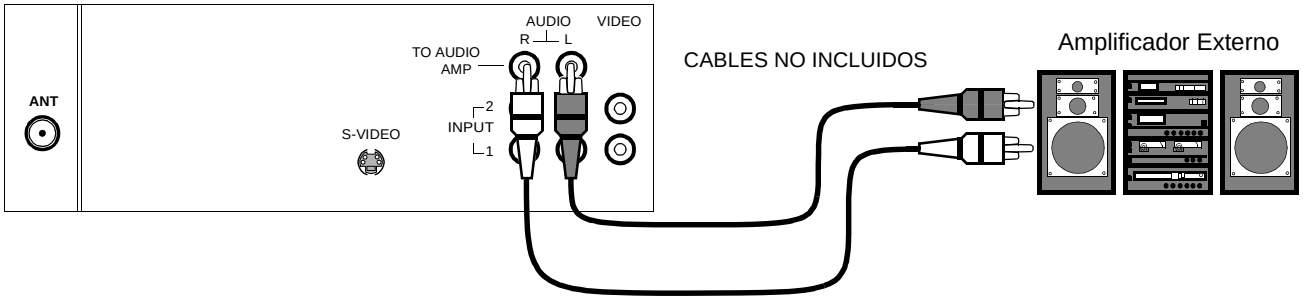

Panel de Control Frontal

TV/VIDEO

Presione ◯ para seleccionar la modalidad de entrada de VIDEO.

Nota: *El panel de control frontal puede ser usado para accesar el menú ó cambiar el modo de video cuando no se disponga del control remoto.*

Terminales en el frente de televisión

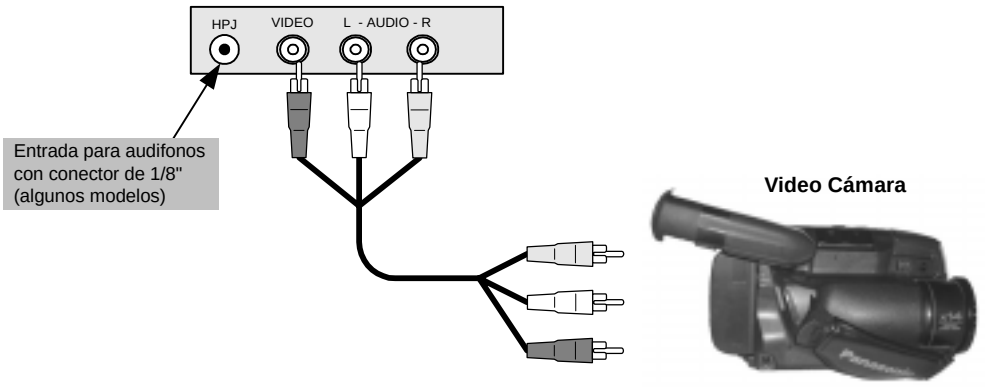

Una segunda videocasetera, un reproductor de videodiscos, un equipo de videojuegos y equipo de DSS (sistema de transmisión digital vía satélite) pueden también ser conectados a las conexiones de Audio/Video. Vea el manual de su equipo opcional para más detalles.

Procedimiento

1. Conecte su equipo a las conexiones Audio/Vídeo en la parte frontal o posterior de la televisión.
2. Opere el equipo como se instruye en el manual del equipo.

Nota: *Conexiones de Audio/Vídeo frontales y de la parte posterior no pueden usarse al mismo tiempo.*

Operación del Control Remoto

(Para los modelos CT-G2132, CT-G2132L, CT-G2172 y CT-G2172L, solamente.)

POWER
Presione para ENCENDER y APAGAR.

VOL
Presione para ajustar el nivel del audio de la TV y navegar en los menús.

“0” ~ “9”
Presione el teclado numérico para seleccionar cualquier canal.

R-TUNE
Presione para regresar al canal previamente visto o modo de vídeo.

EUR501450

MUTE
Presione para silenciar el sonido.

CH
Presione para seleccionar el siguiente canal y navegar en los menús.

ACTION
Presione para accesar los menús.

TV/VIDEO
Presione para seleccionar la Modalidad de televisión o video.

RECALL
Presione para visualizar la hora, el canal, cronómetro de apagado automático, y otras opciones.

Instalación de Pilas en el Control Remoto

Use dos pilas AA:

Quite la tapa del compartimiento de pilas presionando en dirección a la flecha.
Instale las pilas igualando las marcas (+) y (–) de la polaridad.
Coloque nuevamente la tapa de las pilas.

Precauciones

- Reemplace las pilas por pares.
- No mezcle tipos de pilas (carbono de zinc con alcalina).
- No intente cargar, hacer cortocircuito, desarmar, calentar ó quemar las pilas.

Nota: *Instalación incorrecta puede causar derrame y corrosión que dañará al Control Remoto.*

Operación del Control Remoto

(Para los modelos CT-G2972, CT-G2972L, CT-G3352 y CT-G3352X solamente.)

POWER

Presione para ENCENDER y APAGAR

TV VCR DBS/CBL DVD

Presione para seleccionar el funcionamiento del control remoto.

ACTION

Presione para accesar los menús.

TV/VIDEO

Presione para seleccionar la modalidad de televisión o vídeo.

MUTE

Presione para silenciar el sonido.

1 2 3
4 5 6
7 8 9
0

Presione el teclado numérico para seleccionar cualquier canal.

R-TUNE

Presione para regresar al canal previamente visto o modo de vídeo.

EUR511502

***LIGHT**

Presione para illuminar los botones del control remoto.

VOL ◄ ► VOL

Presione para ajustar el nivel del audio de la TV y navegar en los menús.

CH
CH

Presione para seleccionar el siguiente canal y navegar en los menús.

EXIT

Botones de función de DBS.

GUIDE

Botones de función de DBS.

RECALL

Presione para visualizar la hora, el canal, cronómetro de apagado automático, y otras opciones.

REW	PLAY	FF
TV/VCR	STOP	PAUSE
REC	VCR/DBS CH	

Botones de función Componente.

Instalación de Pilas en el Control Remoto

Use dos pilas AA:

Quite la tapa del compartimiento de pilas presionando en dirección a la flecha.
Instale las pilas igualando las marcas (+) y (–) de la polaridad.
Coloque nuevamente la tapa de las pilas.

Precauciones

- Reemplace las pilas por pares.
- No mezcle tipos de pilas (carbono de zinc con alcalina).
- No intente cargar, hacer cortocircuito, desarmar, calentar ó quemar las pilas.

Nota: *Instalación incorrecta puede causar derrame y corrosión que dañará al Control Remoto.*

*Para prolonger la vida de las pilas, encienda y apague la luz presionando los botones R-TUNE y RECALL simultáneamente.

Tabla del Modo operacional de las Teclas

Esta tabla define que teclas funcionan después de programar (si es requerido) el control remoto, cuando se seleccciona uno de los modos TV, DTV, CABLE, DBS, VCR, DVD ...etc.

Nombre	MODO TV	MODO CABLE	MODO DBS
POWER	Encendido	Encendido	Encendido
MUTE	Mudo	Televísión Mudo	Televísión Mudo
TV/VIDEO	Selección De Fuente De Video	Selección De Fuente De Video Televísión	Selección De Fuente De Video Televísión
CHAN UP	Canal Arriba	Canal Arriba	Navegación Arriba
CHAN DOWN	Canal Abajo	Canal Abajo	Navegación Abajo
VOL RIGHT	VOL +	Televísión VOL +	Navegación Derecha
VOL LEFT	VOL -	Televísión VOL -	Navegación Izquierda
ACTION	Menú/Entrar	-	Menú
RECALL	Desplegar Información	Televísión Desplegar Información	Info. De Programa
EXIT	-	-	Salida DBS
GUIDE	-	-	Guia DBS
1	Digito 1	Digito 1	Digito 1
2	Digito 2	Digito 2	Digito 2
3	Digito 3	Digito 3	Digito 3
4	Digito 4	Digito 4	Digito 4
5	Digito 5	Digito 5	Digito 5
6	Digito 6	Digito 6	Digito 6
7	Digito 7	Digito 7	Digito 7
8	Digito 8	Digito 8	Digito 8
9	Digito 9	Digito 9	Digito 9
0	Digito 0	Digito 0	Digito 0
R-TUNE	Canal o Modo De Video Previo	Canal Previo	Programa DBS
<<REW	Regresar VCR	-	-
PLAY	Tocar VCR	-	-
>>FF	FF VCR	-	-
PAUSE	Pausa VCR	-	-
STOP	Detener VCR	-	-
RECORD	Grabar VCR	-	-
TV/VCR	Interruptor TV/VCR	-	-
VCR/DBSCHAN ▼	Canal Abajo VCR	-	DBS Canal Abajo
VCR/DBS CHAN ▲	Canal Arriba VCR	-	DBS Canal Arriba
LIGHT	Iluminar los botones del control remoto		

Tabla del Modo operacional de las Teclas (cont.)

Nombre	MODO VCR	MODO DVD
POWER	Encendido	Encendido
MUTE	Televísión Mudo	Televísión Mudo
TV/VIDEO	Selección De Fuente De Video Televísión	Selección De Fuente De Video Televísión
ACTION	-	-
CHAN UP	-	Capitulo Siguiente
CHAN DOWN	-	Capitulo Previo
VOL RIGHT	Televísión Vol +	Navegación Derecha
VOL LEFT	Televísión Vol -	Navegación Izguierda
RECALL	Despliegue En Pantalla	Despliegue En Pantalla
EXIT	-	-
GUIDE	-	-
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
0	-	-
R-TUNE	-	-
<<REW	Regresar	Salto Atrás <<
PLAY	Tocar	Tocar
>>FF	FF	Salto Atrás FF>>
PAUSE	Pausa	Pausa
STOP	Detener	Detener
RECORD	Grabar	-
TV/VCR	Interruptor TV/VCR	Abrir/Cerrar
VCR/DBS CHAN ▼	Canal Abajo	Despacio -
VCR/DBS CHAN ▲	Canal Arriba	Despacio +
LIGHT	Iluminar los botones del control remoto	

Programando El Control Remoto

El Control Remoto Universal puede programarse para operar componentes de varios fabricantes usando los botones de función para VCR, DVD, CABLE o DBS. Siga los procedimientos para programar su Control Remoto con o sin código para el componente.

Modos De Default Para El Control Remoto

Equipo	Funciona	Default
TELEVISIÓN	TELEVISIÓN (Solo Panasonic)	Código TV Panasonic
CABLE	CABLE (preajustado)	Código CABLE Panasonic
SISTEMA DE TRANSMISIÓN DIGITAL	SISTEMA DE TRANSMISIÓN DIGITAL (preajustado)	Código DBS Panasonic
VIDEOCASETERA	VIDEOCASETERA	Código VCR Panasonic
VIDEO DISCO DIGITAL/DISCO COMPACTO	VIDEO DISCO DIGITAL/DISCO COMPACTO (preajustado)	Código DVD Panasonic

Determine el fabricante del componente y busque en la tabla su código.

Procedimiento

- Confirme que el componente esté conectado y en operación.
- Apague el componente.
- Presione los botones de ACTION y POWER *juntos,* ***cuando menos 5 segundos****.*
- Presione el botón de la función apropiada del componente en el Control Remoto. (VCR, DVD, CABLE o DBS).
- Ponga el código del componente de 3 dígitos usando el teclado numérico (botones 0 ~ 9) del Control Remoto.
- Presione el botón POWER de el Control Remoto para probar el componente. Si éste procedimiento ha sido exitoso, el componente se encenderá.

Consejos Utiles: Código sin éxito
Si el componente no opera con el Control Remoto, repita el procedimiento usando otro código. (Algunas marcas tienen múltiples códigos.) *Si un código se ha puesto incorrectamente, o si el procedimiento toma más de 30 segundos, la programación ha fracasado.*

Programación Sin Código

Este procedimiento busca todos los códigos y se le llama “método de secuencia.”

- Confirme que el componente esté conectado y en operación.
- Apague el componente.
- Presione los botones ACTION y POWER juntos, **cuando menos 5 segundos**.
- Presione el botón de la función apropiada del componente en el Control Remoto.
- Presione el botón VOL▶ para ubicarse en el siguiente código. Presione el botón ◀VOL para regresar al código anterior.
- Presione el botón POWER de el Control Remoto para probar el componente. Si éste procedimiento ha sido exitoso, el componente se encenderá.

  Nota: *Repita los pasos anteriores hasta que el código del componente se halla encontrado. Puede tomar varios intentos hasta encontrar el código correcto.*

- Después de que el código se ha encontrado, presione el botón ACTION para guardar el código.

Códigos de Componentes

El Control Remoto Universal tiene capacidad de operar varias marcas de componentes después de introducir el código apropiado. A causa del límite de memoria no se han incluido todos los códigos existentes, por lo cual es posible que algunos componentes no operen. El Control Remoto Universal no controla todas la funciones y características disponibles en todos los modelos.

Escriba los números del código en este espacio. Esto le servirá como referencia cuando necesite programar su Control Remoto.				
Videocasetera	***Videodisco Digital***	***Sistema de Transmisión digital (DBS)***	***Decodificador de cable***	***Otros***

Codigos para VCR

Marque	Code
Admiral	135
Aiwa	127, 132
Akai	114, 115, 116, 129
Audio Dynamic	111, 139
Bell & Howell	105, 113
Broksonic	120, 126
Canon	123, 125
Citizen	106
Craig	105, 106, 129
Curtis Mathes	124, 127, 145
Daewoo	175, 124, 143
DBX	110, 111, 139
Dimensia	145
Emerson	103, 119, 120, 125, 126, 143
Fisher	105, 107, 108, 109, 113
Funai	120, 126, 134
GE	124, 133,145
Goldstar	106
Gradiente	134
Hitachi	100, 123, 145
Instant Replay	123, 124
Jensen	139
JVC	110, 111, 134,139
Kenwood	306, 310, 311, 339
LXI	100, 105, 106,107, 108, 109
Magnavox	123, 124, 131
Marantz	310, 311, 339
Marta	106
Memorex	109, 124
MGA	138, 140, 141, 147,148
Minolta	100,145
Mitsubishi	138, 140, 141, 147, 148
Multitech	104, 147
NEC	110,111, 134, 139
Olympic	123, 124
Optimus	106, 121, 128, 135

Marque	Code
Orion	120, 126
Panasonic	121,122, 123, 124
J.C. Penney	100,105, 110, 111, 124, 139, 145
Pentax	100,111, 145
Philco	120, 123, 124, 126, 131, 143
Philips	123, 124, 131
Pioneer	123
Proscan	100, 101, 102, 123, 124, 131, 133, 145, 146
Quasar	121, 122, 123, 124
Radio Shack	105, 109, 124, 133, 136, 140
RCA	100, 101,102, 123, 124, 131, 133, 145, 146
Realistic	105, 109, 124, 136, 140
Samsung	102, 104, 133
Sansui	120, 126, 139, 152
Sanyo	105, 109, 113
Scott	101, 102, 104, 109, 120, 126, 138, 140, 147, 148
Sears	100, 105, 106, 107, 108
Sharp	135, 136
Shintom	117
Signature 2000	135
Singer	117
Sony	128, 129, 130
Sylvania	123, 124, 131
Tashiro	106
Tatung	110, 111, 139
Teac	110, 111, 139
Technics	121, 122, 123, 124
Teknika	124
Toshiba	101, 146
Vector Research	111
Wards	106, 109, 135, 136, 144
Yamaha	105, 110, 111, 139
Zenith	106,144

Códigos de Componentes (cont.)

Códigos para Decodificador de Cable

Marque	Code
ABC	224
Archer	225, 232
Cableview	205, 232
Citizen	205, 222
Curtis	212, 213
Diamond	224, 225, 232
Eagle	229
Eastern	234
GC Brand	205,232
Gemini	222
General Instrument/ Jerrold	211, 219, 220, 221, 222, 224, 225, 226, 227
Hamlin	212, 218, 240, 241, 242, 245
Hitachi	203, 224
Macom	203, 204, 205
Memorex	230
Movietime	205, 232
Oak	202, 237,239
Panasonic	209, 210, 214
Philips	206, 207, 228, 229, 230
Pioneer	201, 216
Pulsar	205, 232

Marque	Code
Puser	232
RCA	215
Realistic	232
Regal	212, 218, 240, 241, 242, 245, 249
Regency	234
Rembrandt	205, 232, 237
Samsung	205
Scientific Atlanta	211, 212, 213
Slmark	201, 205
Sprucer	205, 210
Stargate	205, 232
Teleview	201, 205
Texscan	244
Tocom	235, 236,247
Toshiba	204
Unika	225, 232
Universal	222, 232
Videoway	206
Viewstar	229, 230
Zenith	200, 217
Zenith / Drake Satellite	200

Códigos para DVD

Marque	Code
Denon	100
Ferguson	101
JVC	108
Mitsubishi	105
Nordmende	101
Panasonic	100
Philips	103
Pioneer	102
RCA	101

Marque	Code
Saba	101
Samsung	110
Sharp	108
Sony	104
Thomson	101
Toshiba	103
Yamaha	100
Zenith	107

Códigos para DBS

Marque	Code
Dish Network (Echostar)	105, 115, 116
Echo Star	105
G.E.	106
Gradiente	114
Hitachi	103, 111, 112
HNS (Hughes)	103

Marque	Code
Panasonic	104
Philips	101, 102
Primestar	108
RCA	106, 109, 110, 113
Sony	107
Toshiba	100
Uniden	101, 102

Navegación del menu de iconos

Presione para deplegar los iconos.

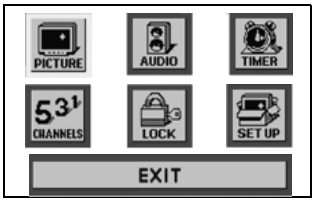

Presione 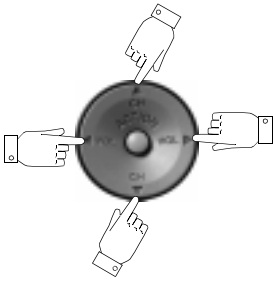 para seleccionar el icono deseado.

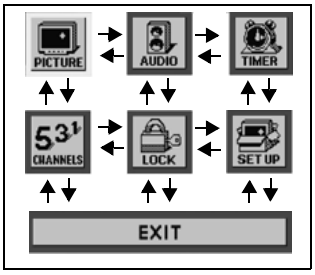

Presione para desplegar las características del icono seleccionado

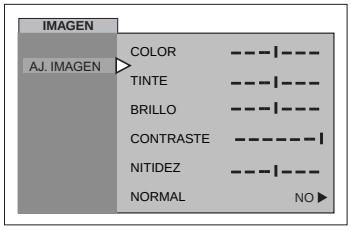

Presione para seleccionar la caracteristica.

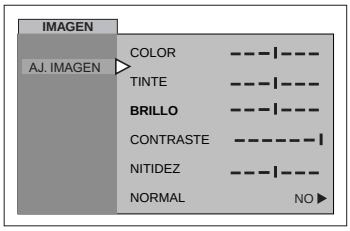

Presione para ajustar o activar la caracteristica

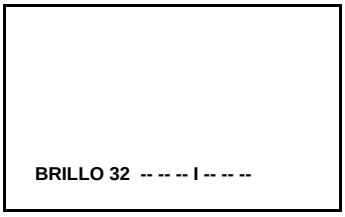

Presione repetidamente para salir de los menús.

Imágen normal

Menu de iconos Principal

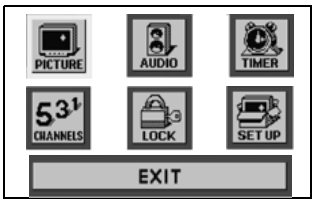

Menú de Iconos

Estas tablas muestran todos los menús de cada icono y a que páginas ir para sus descripciones.

SET UP	Ir a página
IDIOMA/LANGUE ❒ MODO - (INGLÉS, FRANÇAIS, ESPAÑOL)	17
PROG CNLS ❒ MODO - (TELEVISIÓN o CABLE) ❒ PROGRAMA AUTO ❒ PROGRAMA MANUAL	17
CC (CLOSED CAPTIONED - Subtítulos) ❒ MODO CC	18
OTROS AJ. ❒ AUTOENCENDIDO	18

AUDIO	Ir a página
AJ. AUDIO ❒ MODO (ESTERO, SPA o MONO) ❒ BAJOS, ALTOS, BALANCE o NORMAL	20
OTROS AJ. ❒ SONIDO IA	20
SONIDO ENVOLVENTE ❒ ENVOLVENTE	20
ALTAVOCES ❒ SI ❒ APAGADAS Y SALIDA DE AUDIO VARIABLE ❒ APAGADAS Y SALIDA DE AUDIO FIJA	20

TIMER	Ir a página
AJUSTE DE RELOJ ❒ HORA	19
APAGADO ❒ TIEMPO?	19
CRONOM ❒ MODO ❒ ENCENDER ❒ APAGAR ❒ ELIJA CANAL	19

PICTURE	Ir a página
AJ. IMAGEN ❒ COLOR, TINTE, BRILLO, CONTRASTE, NITIDEZ o NORMAL	18

CHANNELS	Ir a página
TITULOS ❒ MANUAL	21

LOCK	Ir a página
MODO ❒ BLOQUEO - (TODOS, CANALES o JUEGO) ❒ PROGRAMAS ❒ TIEMPO?	23
Operación del menú de V-CHIP	24

Operación del Menú de Iconos

AJUSTE

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

Idiomas del Menú

En el menú de SET UP (AJUSTE) bajo IDIOMA/LANGUE seleccione el idioma del menú ENGLISH (Inglés), ESPAÑOL o FRANCAIS (Francés).

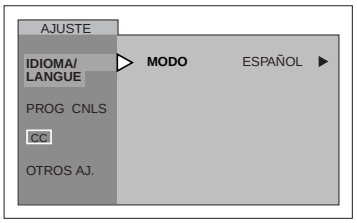

Presione **VOL** ▶ para seleccionar menus en Inglés, Español o Francés.

Prog Cnls (Programación de Canales)

En el menú de AJUSTE bajo PROG CNLS seleccione:

- ❒ MODO - Para seleccionar la modalidad de TV (antena) o CABLE dependiendo de la fuente de la señal.

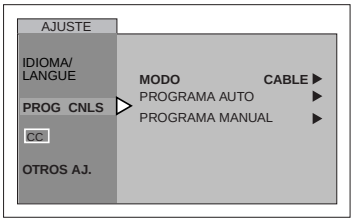

Presione **VOL** ▶ para seleccionar TELEVISIÓN o CABLE.

- ❒ PROGRAMA AUTO -Para programar automáticamente todos los canales con señal.

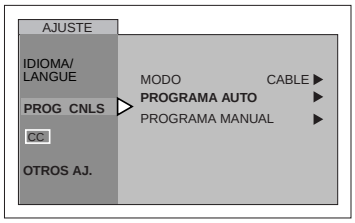

Presione **VOL** ▶ para iniciar la programación automática de canales.

- ❒ PROGRAMA MANUAL - Para manualmente incluir o borrar canales.

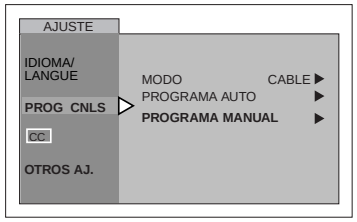

Presione **VOL** ▶ para desplegar el siguiente menú.

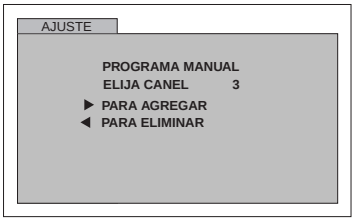

Nota: *Use las teclas numéricas del control remoto para seleccionar los números de canal.*

CC (Subtítulos)

Esta televisión tiene un decodificador integrado que despliega subtítulos (texto en letras blancas o de colores sobre un fondo negro) en pantalla. Permite al usario leer el diálogo de un programa de televisión u otra información. El programa visto debe incluir la modalidad de subtítulos para que esta función opere.

Modo CC

Activa la caracteristica de subtítulos seleccionando uno de los siguientes modos.

- ❒ NO - Cuando no se desea la modalidad de subtítulos.
- ❒ C1 - Para que la información relacionada con el vídeo sea desplegada en hasta 4 líneas en pantalla a la vez. (No bloquea partes relevantes de la imagen). El texto puede ser en cualquier idioma.
- ❒ C2- Otras modalidades de información relacionada con el video.

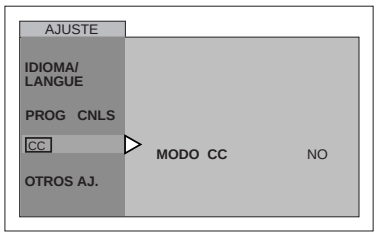

Presione **VOL** ▶ para seleccionar C1, C2 ó NO.

Nota: *Se recomienda el modo C1 para ver subtitulos.*

Otros Ajustes

En el menú de AJUSTE bajo OTROS AJ. seleccione:

- ❒ AUTOENCENDIDO - Seleccione SI para encender la televisión al mismo tiempo que el Decodificador de Cable u otros componentes, ó seleccione NO.

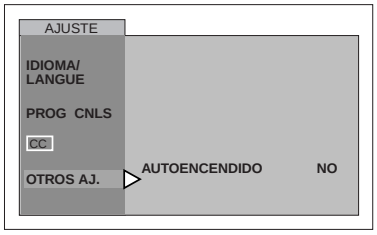

Presione **VOL** ▶ para seleccionar NO ó Si.

IMAGEN

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

AJ. (Ajustes) Imágen

En el menú de PICTURE (Imágen) bajo AJ. IMAGEN seleccione:

- ❒ COLOR - Ajusta la intensidad del color deseada.
- ❒ TINTE - Ajusta los tonos naturales de la piel.
- ❒ BRILLO - Ajusta las áreas oscuras para detalles más nítidos.
- ❒ CONTRASTE - Ajusta las área blancas de la imagen.
- ❒ NITIDEZ - Ajusta para dar mejor claridad a los detalles de la silueta.
- ❒ NORMAL - Reajusta todas las modificaciones de la imagen a los predispuestos de fábrica.

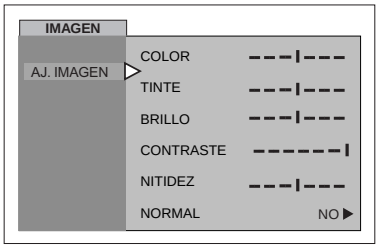

- ❒ Presione **CH** ▼ para seleccionar el ajuste de imágen deseado
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para ajustar.

Cronómetro

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

Ajuste del reloj

Ajusta la hora del día.

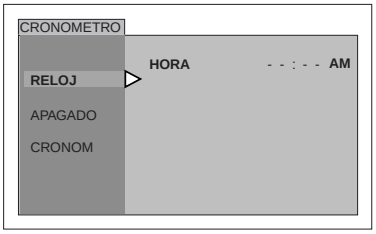

- ❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar horas AM o PM.
- ❒ Presione **CH** ▼ para seleccionar la posición de minutos.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar minutos.

Cronómetro de dormir

En el menú de CRONOMETRO, seleccione APAGADO para poder apagar la Televisión en 30, 60 ó 90 minutos. Seleccione NO para desactivar el CRONOMETRO.

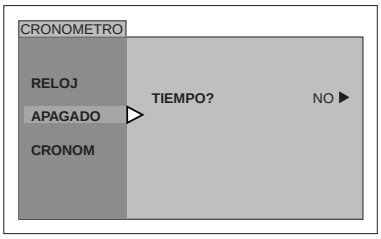

- ❒ Presione **VOL** ▶ para seleccione 30, 60, 90 ó NO.

Cronómetro

En el menú de CRONOMETRO seleccione uno o ambos cronómetros, para encender y apagar la televisión a la hora seleccionada, en un canal seleccionado, en los días seleccionados.

Nota: *La HORA debe anotarse en el menú de RELOJ para que las funciones del CRONOMETRO funcionen.*

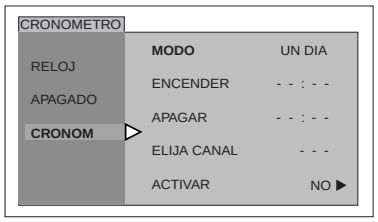

- ❒ Presione **VOL** ▶ para seleccionar día o días.
- ❒ Presione **CH** ▼ para seleccionar tiempo de encendido, luego presione **VOL** ▶.
- ❒ Repita para ajustar el tiempo de apagado.
- ❒ Presione **CH** ▼ para seleccionar ELIJA CANAL, luego presione **VOL** ▶ para seleccionar el canal.
- ❒ Presione **CH** ▼ para seleccionar ACTIVAR, luego presione **VOL** ▶ para seleccionar SI.

.

Apagado después de 90 minutos
La televisión se apaga automáticamente después de 90 minutos cuando se encendió con el CRONOMETRO. Si se selecciona APAGAR o si se presiona una tecla, el apagado automático de 90 minutos se cancela.

Activación del CRONOMETRO
El CRONOMETRO está activo cuando la televisión está apagada o encendida. La televisión cambiará al canal seleccionado a la hora seleccionada según se ajustó en el CRONOMETRO.

AUDIO

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

A.J. Audio (algunos modelos)

- ❒ MODO - Seleccione ESTEREO, SPA (Programa Secundario de audio) o MONO. (Use MONO cuando la señal de estéreo es débil.)

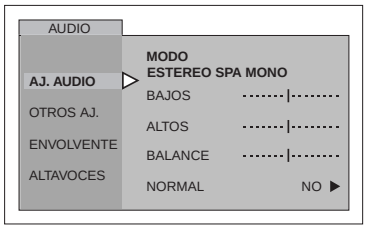

Presione **VOL ▶** para seleccionar ESTEREO, SPA o MONO.

- ❒ BAJOS - Aumenta o disminuye los sonidos bajos.
- ❒ ALTOS - Aumenta o disminuye los sonidos altos.
- ❒ BALANCE - Enfatiza el volumen del altavoz derecho / izquierdo.
- ❒ NORMAL - Reajusta BAJOS, ALTOS y BALANCE a los niveles prefijados de fábrica.

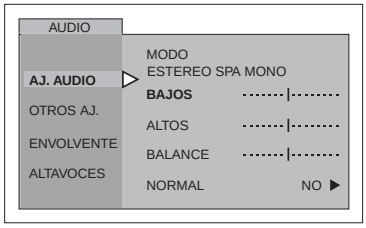

Presione **◀ VOL** ó **VOL ▶** para ajustar.

Otros Ajustes (algunos modelos)

- ❒ SONIDO IA- Automáticamente mantiene el volumen constante entre programas y comerciales.

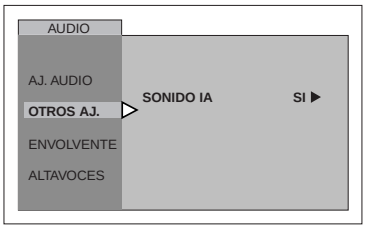

Presione **VOL ▶** para seleccionar SI ó NO.

Envolvente (algunos modelos)

- ❒ Envolvente - Sonido envolvente tridimensional con dos altavoces.

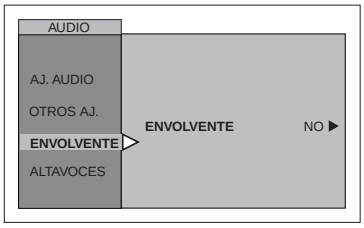

Presione **VOL ▶** para seleccionar SI ó NO.

Altavoces (algunos modelos)

- ❒ En el menú de AUDIO en ALTAVOCES.

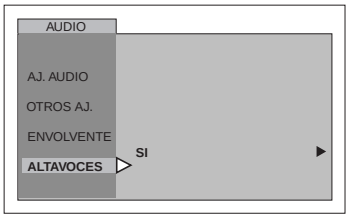

Presione **VOL ▶** para seleccionar:

- ❒ SI - Los Altavoces de la televisión funcionan normalmente.
- ❒ APAGADAS Y SALIDA DE AUDIO VARIABLE - Los Altavoces de la TV están apagados, el sonido es ajustable mediante la televisión.
- ❒ APAGADASB Y SALIDA DE AUDIO FIJA - Los Altavoces de la TV están apagados, el sonido es ajustable sólo mediante el amplificador externo.

CANALES

TÍTULO

❒ MANUAL - Para introducir los números y títulos manualmente.

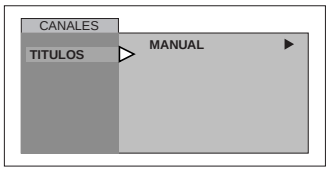

Presione **VOL** ▶ para desplegar el siguiente menú.

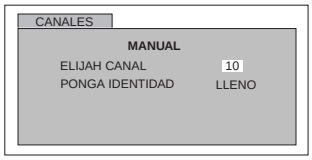

❒ Use el teclado numérico del control remoto para seleccionar el canal deseado (hacer referencia a su guia local de TV).

❒ Presione **CH** ▼ para seleccionar PONGA IDENTIDAD.

❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar caracteres.

BLOQUEO

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

Modo

Bloqueo

Seleccione BLOQUEO para prevenir juegos de vídeo y videocasetes de ser vistos.

❒ *Use un código que sea fácil de recordar y escríbalo en un lugar seguro.*

Notas:

- Use el teclado numérico para introducir un código secreto de cuatro dígitos.
- Si usted no recuerda su código, el BLOQUEO se desactivará en 12, 24, ó 48 horas dependiendo de lo que esté ajustado. Sea cuidadoso al seleccionar SIEMPRE. Si SIEMPRE ha sido seleccionado, y olvida su código secreto, la TV debe ser atendida por un técnico calificado para limpiar el ajuste de BLOQUEO.
- Si selecciona CAMBIO DE CLAVE, e introduce un código diferente al usado previamente en el menú de BLOQUEO, su nuevo código queda como el código definitivo.

❒ No - Para apagar la función de bloqueo.

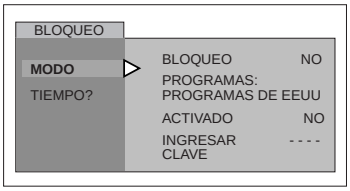

Presione **VOL** ▶ para desplegar el menú de Bloqueo.

❒ JUEGO - Para bloquear los canales 3, 4 y las entradas de vídeo.

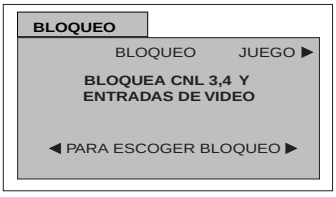

Presione **VOL** ▶ para seleccionar Juego.

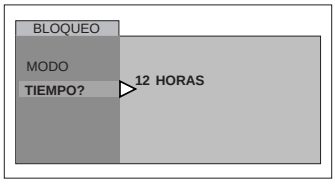

❒ Presione **ACTION** ● dos veces.

❒ Presione **CH** ▼ para seleccionar cuánto tiempo?.

❒ Presione **VOL** ▶ para seleccionar 12 Horas, 24 Horas, 48 Horas o Siempre.

Operación del Menu V-CHIP

Nota: *Vea la pág. 15 para los procedimientos de navegación del menú de iconos.*

Mensaje de Bloqueo

Si el V-Chip está activado y el programa excede el límite de clasificación ajustados por el usuario, aparecerá el mensaje de bloqueo y el sonido será silenciado. Si desea continuar viendo el programa introduzca su código secreto. Después de introducir el código, todos los bloqueos y clasificaciones son desactivados hasta apagar la televisión o hasta que todos los ajustes sean desactivados.

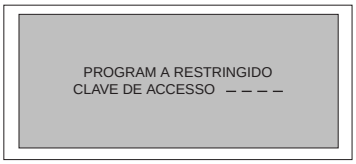

Nota: *Si el código secreto es introducido para anular las clasificaciones, deberá reajustar todas las clasificaciones mediante reprogramción ó apagando la TV.*

Programas de EEUU

Las características de este modelo de televisión y la "Tecnología V-CHIP" permite usar clasificaciones al ver programas de televisión. Esta innovación permite a los padres bloquear varios tipos de programación de TV a su discreción.

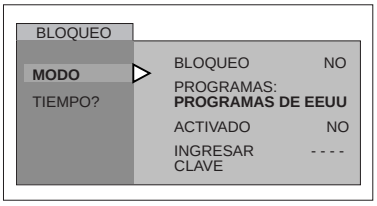

- ❒ Use el teclado numérico para introducir su código de cuatro dígitos. (*Use un código fácil de recordar, y escríbalo en un lugar seguro*).
- ❒ Presione **CH** ▼ para seleccionar PROGRAMAS.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar PROGRAMAS DE EEUU.
- ❒ Presione **CH** ▼ para seleccionar ACTIVADO.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para mostrar el menú de PROGRAMAS DE EEUU.

Tabla de Programas de EEUU

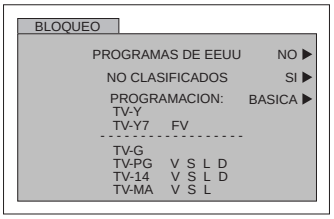

- ❒ Presione **VOL** ▶ para seleccionar PROGRAMAS DE EEUU NO o SI.
- ❒ Presione **CH** ▼ para seleccionar NO CLASIFICADOS.

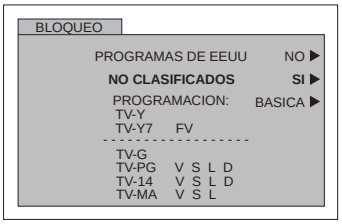

- ❒ Presione **VOL** ▶ para seleccionar NO CLASIFICADOS SI o NO.

  Nota: *Si se selecciona "SI" se recibirán programas NO CLASIFICADOS. Si se selecciona "NO" se bloquearán los programas NO CLASIFICADOS. Vea el recuadro Precauciones del Cliente en la siguiente página.*

- ❒ Presione **CH** ▼ para seleccionar PROGRAMACION.

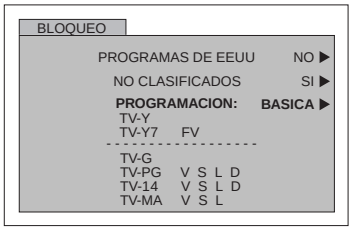

- ❒ Presione **VOL** ▶ para seleccionar BASICA o DETALLADA.

  BASICA - Solo le permite seleccionar clasificaciones generales como TV-Y, TV-PG, etc.

  DETALLADA - Le permite seleccionar clasificaciones generales y contenido como V, L, etc.

Tabla de Programas de EEUU (cont.)

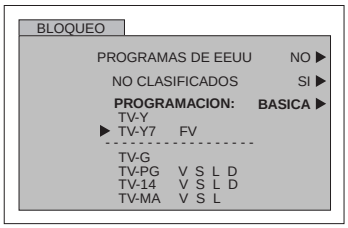

- ❒ Presione CH ▲ ó CH ▼ para mover el cursor entre la diferentes clasificaciones.
- ❒ Use ◀ VOL ó VOL ▶ para seleccionar las clasificaciones que desea bloquear (**ROJO**) y desactivar el bloqueo (**VERDE**).

Nota: *Vea la tabla de PROGRAMAS DE EEUU.*

- ❒ Presione ACTION ● dos veces para regresar a MODO en el menú de BLOQUE0.
- ❒ Presione CH ▼ para realzar TIEMPO?.
- ❒ Presione ◀ VOL ó VOL ▶ para seleccionar 12, 24, 48 horas o SIEMPRE.

Precauciones del Cliente
El sistema V-CHIP que es usado en este equipo es capaz de bloquear programas "NO CLASIFICADOS" (no clasificados, clasificación no aplicable y ninguna) de acuerdo a la sección 15.120(e)(2) del Comité Federal de Comunicaciones de los Estados Unidos Si la opción de bloqueo "NO CLASIFICADO" es escogida *"*pueden ocurrir resultados inesperados y posiblemente confusos, además usted podría no recibir boletines de emergencia o cualquiera de los siguientes tipos de programación:*"* • Boletines de Emergencia (como mensajes de EAS (Servicios de Alerta en Emergencias, advertencias del clima y otros) • Programas originados localmente • Noticias • Política • Anuncios de Servicio Público • Religioso • Deportes • Estado del Tiempo

TABLA DE PROGRAMAS DE EEUU

NR	**No clasificado. VEA CUIDADO DEL CLIENTE en la página anterior.**
TV-Y	**Todos los niños.** Los temas y elementos en este programa están especialmente diseñados para un público infantil, incluyendo niños de 2-6 años.
TV-Y7	**Dirigido a niños mayores.** Los temas y elementos en este programa pueden incluir ligera violencia física o cómica, o puede asustar a niños menores de 7 años.
TV-G	**Audiencia General**. Contiene poca o nada de violencia, nada de lenguaje fuerte, y poco o nada de diálogo o situaciones con contenido sexual.
TV-PG	**Guía de los padres sugerida**. El programa puede contener lenguaje obsceno infrecuente, violencia limitada, diálogos o situaciones sexualmente sugestivas.
TV-14	**Advertencia a los padres**. Este programa puede contener temas sofisticados, contenido sexual, lenguaje inapropiado, y violencia más intensa.
TV-MA	**Sólo audiencia Madura.** Este programa puede contener temas para adultos, lenguaje profano, violencia gráfica y contenido sexual explícito.
FV	**FANTASIA/ CARICATURAS CON VIOLENCIA**
V	**VIOLENCIA**
S	**SEXO**
L	**LENGUAJE OFENSIVO**
D	**DIALOGO CON CONTENIDO SEXUAL**

Peliculas de EEUU

Las características de este modelo de televisión y la "Tecnología V-CHIP" permite usar clasificaciones al ver películas o vídeos. Esta innovación permite a los padres bloquear varios tipos de películas y vídeos a su discreción.

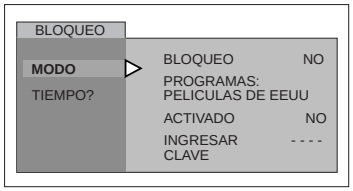

- ❒ Use el teclado numérico para introducir su código secreto de cuatro dígitos. (*Use un código fácil de recordar, y escríbalo en un lugar seguro.*)
- ❒ Presione CH ▼ para realzar PROGRAMAS.
- ❒ Presione ◀ VOL ó VOL ▶ para seleccionar PELICULAS DE EEUU.
- ❒ Presione CH ▼ para realzar ACTIVADO.
- ❒ Presione ◀ VOL ó VOL ▶ para mostrar el menú de PELICULAS DE EEUU.

TABLA DE PELICULAS DE EEUU

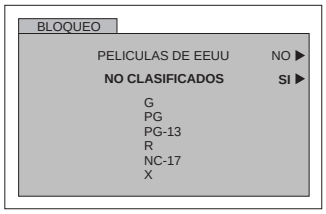

- ❒ Presione VOL ▶ para seleccionar NO CLASFICADOS SI o NO.

Nota: Algunas veces las películas no son clasificadas por una variedad de razones. Películas antiguas y extranjeras normalmente no tienen clasificación.

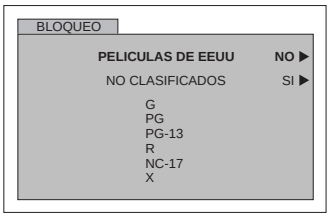

- ❒ Presione VOL ▶ para seleccionar PELICULAS DE EEUU NO o SI.
- ❒ Presione CH ▼ para realzar NO CLASIFICADOS.

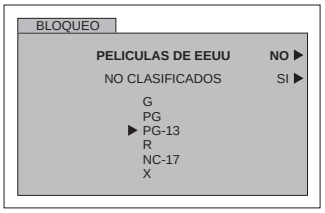

PG-13, R, NC-17 y X serán bloqueados

- ❒ Presione ▲ CH ó CH ▼ para mover el cursor entre la diferentes clasificaciones.
- ❒ Use ◀ VOL ó VOL ▶ para seleccionar las clasificaciones que desea bloquear (**ROJO**) y desactivar el bloqueo (**VERDE**).

Nota: *Vea la tabla de CLASIFICACION DE PELICULAS DE EEUU.*

- ❒ Presione ACTION ● dos veces para regresar a MODO en el menú de BLOQUEO.
- ❒ Presione CH ▼ para realzar TIEMPO?.
- ❒ Presione ◀ VOL ó VOL ▶ para seleccionar 12, 24, 48 horas o SIEMPRE.

TABLA DE CLASIFICACION DE PELICULAS DE EEUU

NR	**PROGRAMA NO CLASIFICADO Y NA (NO APLICABLE)**. Película que no ha sido clasificada o que la clasificacion no aplica.
G	**AUDIENCIA GENERAL.** Se admiten todas las edades.
PG	**GUIA DE LOS PADRES SUGERIDA.** Con material no aconsejable para niños.
PG-13	**FUERTE SUPERVISION DE LOS PADRES.** Con material que puede ser inapropiado para niños menores de 13 años.
R	**AUDIENCIA GENERAL.** Se admiten todas las edades.
NC-17	**NO SE ADMITE NADIE DE 17 AÑOS O MENOS.**
X	**SOLO ADULTOS.**

Sistemas de Clasificación de Canada

Inglés de Canada

Las características de este modelo de televisión y la "Tecnología V-CHIP" permite usar clasificaciones al ver películas o vídeos. Esta innovación permite a los padres bloquear varios tipos de películas y vídeos a su discreción.

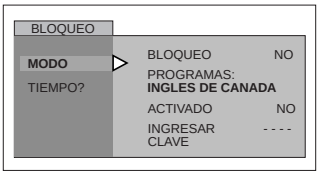

- ❒ Use el teclado numérico para introducir su código de cuatro dígitos. (*Use un código fácil de recordar, y escríbalo en un lugar seguro*).
- ❒ Presione **CH** ▼ para realzar PROGRAMAS.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar INGLES DE CANADA.
- ❒ Presione **CH** ▼ para realzar ACTIVADO.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para mostrar el menú de INGLES DE CANADA.

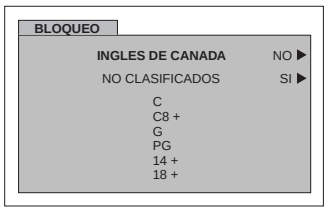

- ❒ Presione **VOL** ▶ para seleccionar INGLES DE CANADA NO o SI.
- ❒ Presione **CH** ▼ para realzar NO CLASIFICADOS.

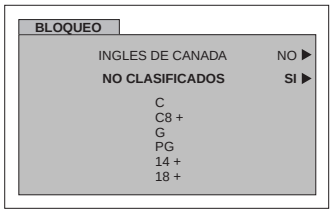

- ❒ Presione **VOL** ▶ para seleccionar NO CLASIFICADOS? SI o NO.

Nota: *E (Exento)* Los programas exentos incluyen: noticieros, deportivos, documentales y programas informativos; programas de entretenimiento, videos musicales, y programación variada.

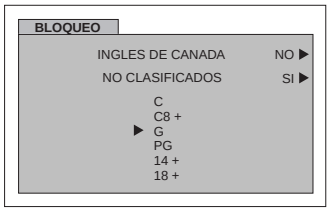

- ❒ Presione **CH** ▲ ó **CH** ▼ para mover el cursor entre la diferentes clasificaciones.
- ❒ Use ◀ **VOL** ó **VOL** ▶ para seleccionar las clasificaciones que desea bloquear (ROJO) y desactivar el bloqueo (VERDE).

  Nota: *Vea la tabla de INGLES DE CANADA*
- ❒ Presione **ACTION** ● dos veces para regresar a MODO en el menú de BLOQUEO.
- ❒ Presione **CH** ▼ para realzar TIEMPO?.
- ❒ Presione ◀ **VOL** ó **VOL** ▶ para seleccionar 12, 24, 48 horas o SIEMPRE.

TABLA DE INGLES DE CANADA

E	**Exento -** Los programas exentos incluyen: noticieros, deportivos, documentales y programas informativos; programas de entretenimiento, videos musicales, y programación variada**.**
c	**Programación dirigida a niños menores de 8 años.** No contiene lenguaje ofensivo, sexual ni desnudos.
C8+	**Programación considerada apta para niños de 8 años en adelante.** No tiene contenido sexual ni desnudos.
G	**AUDIENCIA GENERAL.** Se admiten todas las edades.
PG	**GUIA DE LOS PADRES SUGERIDA.** Con material no aconsejable para niños**..**
14+	**Programación que por su contenido no es recomendada para espectadores menores de 14 años.** Se recomienda a los padres discreción con audiencia adolenscente.
18	**SOLO ADULTOS**

Francés de Canada

Las características de este modelo de televisión y la "Tecnología V-CHIP" permite usar clasificaciones al ver películas o vídeos. Esta innovación permite a los padres bloquear varios tipos de películas y vídeos a su discreción.

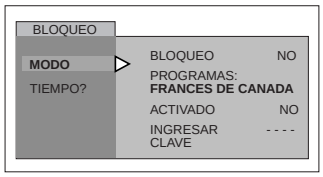

- ❒ Use el teclado numérico para introducir su código de cuatro dígitos. (*Use un código fácil de recordar, y escríbalo en un lugar seguro*).
- ❒ Presione CH ▼ para realzar PROGRAMAS.
- ❒ Presione ◀ VOL ó VOL ▶ para seleccionar FRANCES DE CANADA.
- ❒ Presione CH ▼ para realzar ACTIVADO.
- ❒ Presione ◀ VOL ó VOL ▶ para mostrar el menú de FRANCES DE CANADA.

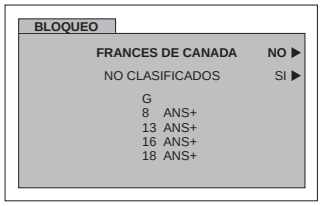

- ❒ Presione VOL ▶ para seleccionar FRANCES DE CANADA SI o NO.
- ❒ Presione CH ▼ para realzar NO CLASIFICADOS.

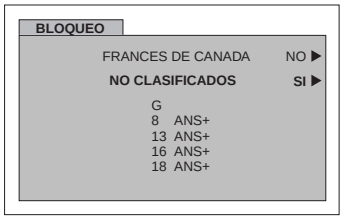

- ❒ Presione VOL ▶ para seleccionar NO CLASIFICADOS? SI o NO.

Nota: *E (*Si se selecciona "SI" se recibirán programas NO CLASIFICADOS. Si se selecciona "NO" se bloquearán los programas NO CLASIFICADOS. Vea el recuadro Cuidado del Cliente en la parte inferior de la página.)

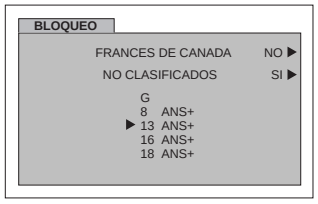

13ANS+, 16ANS+ y 18ANS+ serán bloqueados

- ❒ Presione CH ▲ ó CH ▼ para mover el cursor entre la diferentes clasificaciones.
- ❒ Use ◀ VOL ó VOL ▶ para seleccionar las clasificaciones que desea bloquear (**ROJO**) y desactivar el bloqueo (**VERDE**).

  Nota: *Vea la tabla de FRANCES DE CANADA*
- ❒ Presione ACTION ● dos veces para regresar a MODO en el menú de BLOQUEO.
- ❒ Presione CH ▼ para realzar TIEMPO?.
- ❒ Presione ◀ VOL ó VOL ▶ para seleccionar 12, 24, 48 horas o SIEMPRE.

TABLA DE CLASIFICACIONES PARA EL FRANCES DE CANADA

E	**Exento - Programación exenta.**
G	**Audiencia General**. Contiene poca o nada de violencia, nada de lenguaje fuerte, y poco o nada de dialogo o situaciones con contenido sexual.
8 ans +	**8+ General -** No recomendada para niños pequeños. Programación dirigida a la audiencia general, pero con ligero u ocasional contenido de violencia. Se recomienda supervisión de un adulto.
13 ans +	**Programación no recomenda para niños menores de 13 años** - Puede contener algunas escenas violentas que podrían asustar a los menores. Se recomienda enfaticamente supervisión de un adulto.
16 ans +	**Programación no recomenda para menores de 16 años** - Contiene frecuentes escenas de violencia o violencia intensa.
18 ans +	**Programación solo para adultos** - contiene escenas de violencia o de violencia extrema.

Recepción de Radio FM

(Para modelo CT-25G7 solamente.)
Algunos televisores tienen sintonizador de FM integrado. Es posible programar hasta nueve diferentes estaciones de FM para un fácil aceso.

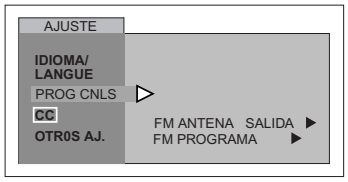

- ❒ Presione dos veces el botón del control remoto para entrar al modo FM.
- ❒ Presione ACTION para desplegar el menú.
- ❒ Presione los botones ▲▼ ó ◀▶ para seleccionar el ícono de SETUP.
- ❒ Presione ACTION en el remoto para desplegar el menú SETUP.
- ❒ Presione ▲ ó ▼ para seleccionar PROG CNLS.
- ❒ Presione ▶ para realzar ANTENA FM.

.

- ❒ Presione ◀ ó ▶ para seleccionar INT o EXT.
  - INT - Para usuarios de cable.
  - EXT - Para usuarios de antenna terrestre.
- ❒ Presione ▼ para seleccionar PROGRAMA FM
- ❒ Presione ▶ para desplegar la pantalla de PROGRAMA FM.
- ❒ Utilice el teclado nemérico en el control remoto para seleccionar la posición deseada.
- ❒ Presione ▲ ó ▼ para seleccionar la estación de FM deseada.
- ❒ Presione ▶ para agregar la estación a la memoria
- ❒ Repita los pasos 10 a 12 para programar las 9 posiciones en la memoria.
- ❒ Presione ACTION para salir del menú de programación.

Nota: *Puede seleccionar cualquiera de las 9 estaciones presionando el numero correspondiente en el control Remoto.*

Consejos Utiles:
En modo FM, sin volúmen o en modo Mudo, no hay indicación de que el set esta encendio, el volúmen debe de mantenerse a un nivel audible.

Si quiere seleccionar manualmente una estación, siga los siguientes pasos.
En el modo FM, presione ▲ ó ▼ para cambiar la estación.

Nota: *En modo FM, presione el botón **R-TUNE** para alternar entre TV y FM.*

Cuadro de Localización de Fallas

Antes de solicitar servicio, establezca los síntomas y lleve a cabo las siguientes posibles soluciones.

SONIDO	IMAGEN	Soluciones
Sonido Ruidoso	Imagen Moteada	Ajuste la Ubicación y/o Conexión de la Antena
Sonido Ruidoso	Imagen Múltiple	Ajuste la Ubicación y la Conexión de la Antena Revise el Cable de Entrada de la Antena
Sonido Ruidoso	Interferencia	Aleje la TV de los Aparatos Electrodomésticos, Luces, Vehículos y Equipo Médico
Sin Sonido	Imagen Normal	Aumente el Volumen Revise Mute (Mudo) Revise en el Menú de Audio: ALTAVOCES > SI Cambie el Canal
Sonido Ruidoso	 Sin Imagen/Con Motas	Ajuste apropiadamente la modalidad de TV o del Cable Revise los Cables de la Antena
Sin Sonido	Sin Imagen	Revise que el Cable de Corriente este Enchufado a una toma de Corriente Activa Ajuste los Controles de Brillo y Audio Cambie el Canal Revise las Conexiones del Cable Programe el Control Remoto otra vez Revise la Operación de la Segunda Fuente de Video
Sonido Normal	Sin Color	Ajuste el Color Cambie el Canal
Sonido Erróneo	Imagen Normal	Revise en el menú de AUDIO que el Ajuste se encuentre en Estéreo o Mono, no en SPA
Sonido Normal	Imagen Normal	Reemplace las Pilas del Control Remoto
Operación Intermitente del Control Remoto		

(Para los modelos CT-G2132, CT-G2172, CT-G2132L, CT-G2172, CT-G2972, CT-G2972 y CT-G3352 solamente.)

Nota: *La hoja de garantía y la información de centros de servicio para el modelo **CT-G3352X** está localizada en la bolsa de documentos.*

National
Panasonic
Technics

Guia de Servicios Tecnicos

En caso que su unidad deba ser reparada en cualquier otro pais que no sea el de compra, se ruega ponerse en contacto con uno de los centros de servicio mencionados por pais en esta Guia. Recuerde que la presente Guia de Servicios Técnicos no es garantia y que la presentación de la misma no acondiciona en ningún momento a que el servicio prestado sea gratuito, sino con pagos correspondientes, salvo aquellos que se presten de acuerdo con las condiciones estipuladas en esta Guia y que se realicen en los paises de su aplicación. En caso que la pieza o piezas requeridas estén sujetas a restricciones de importación, rogamos tener presente que se podria requerir más tiempo para la reparación del producto. En algunos casos, el servicio no podra realizarse, po no disponer de las piezas necesarias debido a restriciones de importación o porque las técnicas o herramientas para tales reparaciones no existen en paises donde estos productos no están a la venta en nuestros distribuidores de ventas autorizados.

Casas De Servicio Autorizadas

LATIN	ARGENTINA	Panasonic de Fueguina S.A.	Manuel Garcia 352 C.P. 1284-Buenos Aires	Tel. 3087-1610
AMERICA	BRAZIL	Panasonic do Brasil Ltda.	Rod. Presidente Dutra KM159 San Jose Dos Campos Sao Paulo	Tel. (0123) 31-8011
	CHILE	Soc. de Servicios Electrónicos Ltda.	Santa Elena 1722, Casilla 401, Correo 3 Santiago	Tel. 567096, -7, -8
	COSTA RICA	Panasonic de Costa Rica, S.A.	Apartado 5295, San Jose	Tel. 39-1911
	EL SALVADOR	Panasonic de El Salvador, SA. de C.V.	Apartado Postal (06), 1208 San Salvador	Tel. 71-4482
	GUATEMALA	Panasonic de Guatemala, S.A.	5a Calle 1-02, Zona 13, Ciudad de Guatemala, Guatemala	Tel. 72-0536
	PANAMA	Panasonic Latin America, S.A.	Via Simon Bolivar (Transistmica). Contiguo Colegio la Salle	Tel. (507) 29-2294
	The caribbean area and other Latin America countries except México	Please contact Panasonic Latin America, S.A. (PANAMA)		Fax. (507) 29-2536
	PERU	Matsushita Electric del Peru, S.A.	Av. La Marina 2620, San Miguel, Lima	Tel. 52-94-70
	VENEZUELA	“Panasonic” Corporation Venezolana, S.A.	Av. El hatillo, Con Av. Gonzalez Rincones, Edf. Panasonic, LA Trinidad, Caracas	Tel. 93-30-22
ASIA	PHILIPPINES	Matsushita Electric Phillipines Corp	Bonaventure Plaza Garden Level and Ground Floor, Ortigas Avenue, Greenhills, San Juan Metro Manila	Tel. 2-793960, 793630

Indice

A

AJ. Audio 20
AJ. (Ajustes) Imágen 18
Ajuste del reloj 19
Altavoces 20
Altos 20
Antena VHF/UHF 3
Audio 20
Autoencendido 18

B

Bajos 20
Balance 20
Bloqueo 21
Brillo 18

C

Cable De Suministro De Corriente Alterna 3
Canales 21
CC Modo 18
Códigos de Componentes 13
Códigos para Decodificador de Cable 14
Códigos para DVD 14
Códigos para VCR 13
Color 18
Conexión de Antena 3
Conexión de Cable / Antena 3
Conexión de la Videocasetera 6
Conexión del Amplificador 6
Conexiones de Cable Opcional 3
Contraste 18
Cronómetro 19
Cronómetro de dormir 19
Cuadro de Localización de Fallas 28
Cuidado y limpieza 2

E

Envolvente 20
Especificaciones 2
Estereo 20

F

Felicidades 2
Francés de Canada (V-Chip) 26

G

Gabinete y Control Remoto 2
Guia de Servicios Tecnicos 29

I

Idiomas del Menú 17
Imágen 18
Inglés de Canada (V-Chip) 25
Instalación 3
Instalación de Pilas en el Control Remoto 8, 9

J

Juego 21

M

Manual (Canales) 21
Menú de auto Programación 5
Menú de Iconos 16
Menú de iconos Principal 16
Modos de Default Para El Control Remoto 12
Mono 20

N

Navegación del menu de Iconos 15
Nitidez 18
Normal 18, 20

O

Operación del Control Remoto 8, 9
Operación del menú de Iconos 17
Operación Menu V-CHIP 22
Otros Ajustes 20

P

Panel de Control Frontal 7
Pantalla 2
Peliculas de EEUU 24
Ponga Título 21
Precaución 3
Prog Cnls (Programación de Canales) 17
Programa Auto 17
Programa Manual 17
Programando El Control Remoto 12
Programas de EEUU 22
Programas Sin Código 12

R

Recepción de Radio FM 27
Registro del Usuario 2

S

Sistemas de Clasificación de Canada 25
Sonido IA 20
SPA 20
Subtítulos 18

T

Tabla de Clasificacion de Peliculas De EEUU 24
Tabla de Comparación de Características 4
Tabla de Peliculas de EEUU 24
Tabla de Programas De EEUU 22
Tabla del Modo Operacional De las Teclas 10
Televisión o Cable Modo 5
Tinte 18
Título 21

U

Ubicación de la Televisión 3

Panasonic Consumer Electronics Company,
Division of Matsushita
Electric Corporation of America
One Panasonic Way
Secaucus, New Jersey 07094
www.panasonic.com

Panasonic de Mexico, S.A, de C.V.
Amores No. 1120
Col. Del Valle C.P. 03100
México, D.F.
Tel. (0155) 5488-1000
Fax (0155) 5575-6763, 5575-6765

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico Inc. ("PSC")
Ave. 65 de Infantería, Km 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985
Tel. (787) 750-4300
Fax (787) 768-2910

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages